


1. DesignBuilder Revit – gbXML Tutorial

Introduction

This Tutorial has been developed to help Revit users transfer their [Revit](#) BIM models to the [DesignBuilder](#) building performance analysis software to access data on daylighting, heating and cooling loads, LEED / BREEAM energy credits, UK Part-L compliance checking, energy consumption and comfort data for the building design.

The Tutorial starts by explaining the fundamentals of the Revit to DesignBuilder transition process covering both the DesignBuilder Revit Add-in and the built-in Export gbXML method. It then explains how to prepare the Revit model before starting the transition process and how to check and tidy the final model once it has been loaded into DesignBuilder. Finally, 3 examples are provided with step-by-step instructions on how to load a sample model provided with the Revit distribution into DesignBuilder.

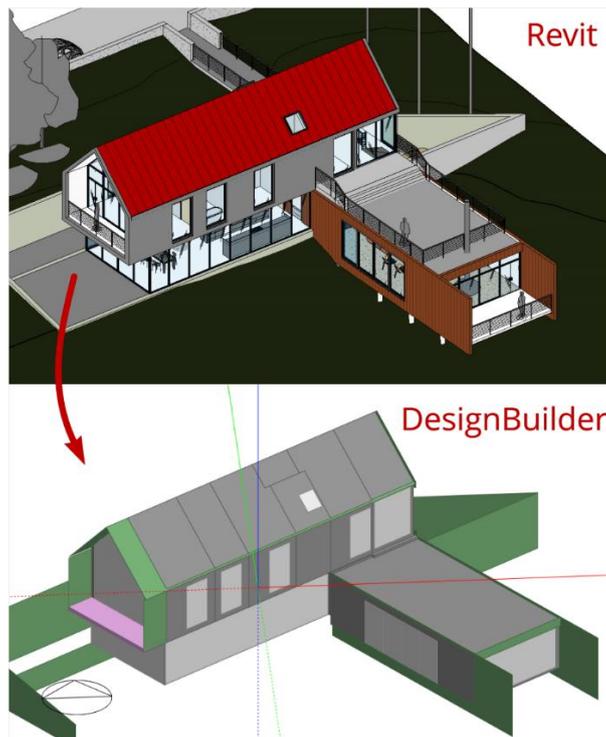

Some materials included in the Tutorial are based on Revit and DesignBuilder online help from:

- <http://help.autodesk.com/view/RVT/2018/ENU/> and
- <http://www.designbuilder.co.uk/helpv7.0>.

Links have been provided to the original text and other relevant websites to allow you to find additional details.

Contents


1. DesignBuilder Revit – gbXML Tutorial	1
Introduction	1
Contents.....	2
Understanding the Transition Process.....	3
Overview of the Process	3
2. DesignBuilder-Revit Add-in (Methods 1 and 3).....	4
DesignBuilder Settings.....	5
3. Exporting the gbXML file from Revit (Methods 2 and 4)	10
4. Preparing the Energy Analytical Model	12
Energy Settings dialog.....	12
5. Preparing the Analytical Model by Adding Rooms	15
Defining Rooms	15
Zone Volume computations.....	18
Checking the Analytical Model.....	20
Tips	22
Export gbXML Dialog - Use Room/Space Volumes.....	26
Geometry Conventions.....	28
6. Example Cases	29
Example 1 - Revit Add-in (Simple with shading surfaces).....	30
Example 2 - Revit Add-in (Complex with shading surfaces).....	38
Example 3 - Built-in Revit gbXML export	40
7. Advice	42

Understanding the Transition Process

Although the native Revit BIM data includes considerable intelligence, it does not contain the volumetric/zonal data required by building performance analysis tools such as DesignBuilder. This data must be superimposed on top of the native Revit architectural model. It is usually referred to as the “Analytical Model” because it is the model on which subsequent analysis is based.

The diagram below shows the data objects involved in the transition process from Revit to DesignBuilder.

Data Diagram for the Revit to DesignBuilder Transition

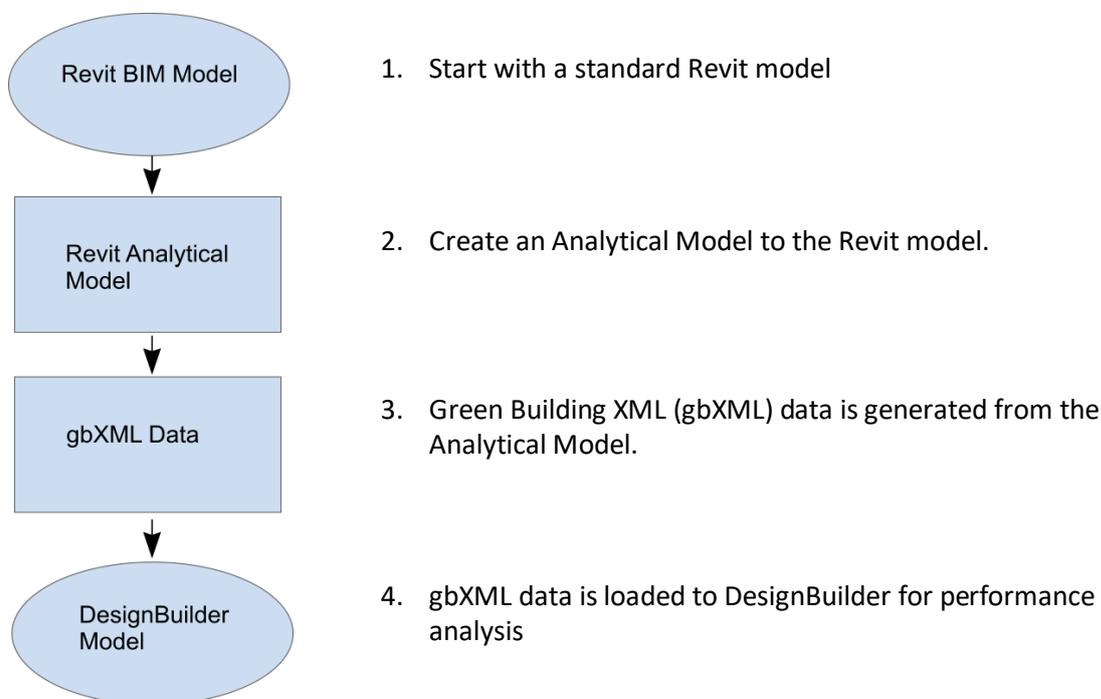

Overview of the Process

There are currently two ways to transfer Revit BIM data to DesignBuilder:

1. Using the **DesignBuilder Revit Add-in**.
2. Using the built-in Revit **gbXML export** menu option to create a gbXML file which is then imported into DesignBuilder.


For each of these 2 overall approaches to transferring data to DesignBuilder you can choose between 2 methods to generate an intermediate Analytical Model:

- a) Place rooms to create an **Analytical Model (AM)**. This can be done either manually or for, closed and bounded areas, it can be done [automatically](#).

- b) Automatically create the **Energy Analytical Model (EAM)**.

So depending on whether the Add-in or the import/export process is used and whether the EAM or the AM is used, overall there are 4 different methods to export Revit models into DesignBuilder. The diagram below summarises the processes involved with these 4 methods of data transfer.

Exporting Revit Models to DesignBuilder

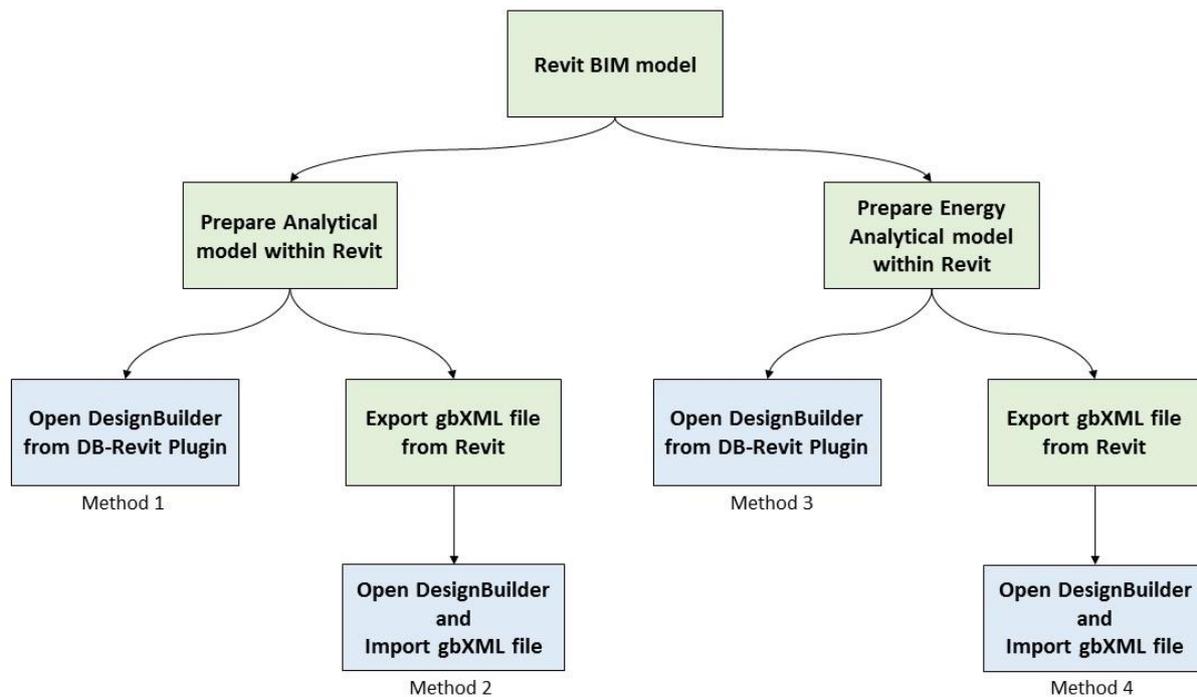

Note: Interoperability between Revit and DesignBuilder is achieved through basically the same underlying gbXML processes regardless of which method is used.

For methods 1 and 2, the preparation of the AM within Revit is the same for both add-in and export methods. The most important of these steps is to accurately identify the “rooms” or “spaces” in the model. These steps are described in more detail below. Likewise, for methods 3 and 4, the preparation of the EAM is the same for both add-in and export methods. Note that Revit creates the EAM automatically in all cases, i.e. there is no manual option.

2. DesignBuilder-Revit Add-in (Methods 1 and 3)

This section summarises how to use the DesignBuilder-Revit add-in to facilitate the transfer of the Revit BIM model geometry data and building thermal properties directly to DesignBuilder. The following steps should be followed:

- a. **Set up the AM or EAM.** Once you have correctly set up the analytical model as described below in the section [Preparing the Energy Analytical Model](#) (when using the **1-Use Energy settings** Revit export method) or [Preparing the Analytical Model by adding Rooms](#) (when

using the **2-Use Rooms/Spaces_Volumes** Revit export method] you are ready to export to DesignBuilder.

- b. **Check Add-in settings.** See [DesignBuilder Settings](#) below.
- c. **Open in DesignBuilder.** The add-in “Open” toolbar icon can be found on the **Analyze** menu within the DesignBuilder section, towards the right of the Revit toolbar as shown below.




Note: The DesignBuilder “Open” add-in toolbar icon will only be available after you have installed DesignBuilder and run it for the first time.


- d. **Check the DesignBuilder model.** See [Example Cases](#).

DesignBuilder Settings

Before you open your Revit model in DesignBuilder you should review the DesignBuilder transfer settings by clicking on the “Settings” toolbar icon of the DesignBuilder add-in.

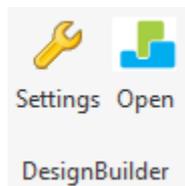

The **DesignBuilder Settings** dialog allows you to control the way that the transition is carried out. The effect of each setting is described below.

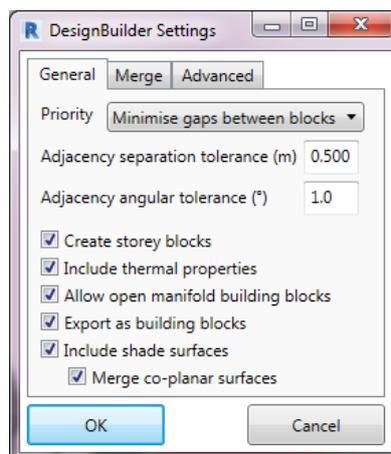

General Tab

Settings on the **General** tab control the behaviour at the import end within DesignBuilder.

Priority

This option allows you to define whether the system should prioritise reduction of gaps between blocks or whether to aim to minimise likelihood of open manifold blocks being generated.

- **Minimise gaps between blocks** where the gbXML surfaces are used to define block geometry. This is the default option as it typically gives the best results for the majority of BIM models imported from Revit.
- **Minimise open manifold blocks** where DesignBuilder works out whether it would be better to use the space or surface data sets based on the criterion that the number of [open manifold blocks](#) should be minimised. Open manifold blocks are blocks that are not fully enclosed.

Adjacency separation tolerance

This is the maximum gap between neighbouring parallel gbXML surfaces that will be interpreted as being an adjacency between 2 spaces. You might enter a value higher than the default 0.01m if the gbXML spaces are separated by large gaps due to thick partitions or ceiling /floor voids being excluded from the gbXML. For example if the largest gap in the between spaces that are to be modelled as adjacent is 0.3m then enter 0.3m here.

The Adjacency tolerance can also be updated, if necessary, after the import from the Advanced tab of the DesignBuilder Model options dialog.

Create storey blocks

This option is used by default to automatically identify stories by grouping adjacent spaces created by extruding from the floor plan with the same upper and lower Z coordinates into single blocks. This has the advantage of making it much easier to later modify internal layouts and it also helps to navigate around large models.

Note: It is sometimes an advantage, especially in lower quality gbXML data sets, to import raw surface geometry exactly as defined in the BIM model. In this case the **Create storey blocks** setting should be switched off and the **Allow open manifold building blocks** setting (below) should be switched on.

Import as building blocks

By default this option is selected and the geometric space data will be imported as building blocks ready for use in DesignBuilder modelling. However, you can instead import BIM space geometry as [Outline blocks](#) by unchecking this option. The outline blocks give an exact representation of the gbXML spaces in the gbXML and this can be useful for diagnosing problems with poor gbXML. For example if any part of a space intersects with another space then it would not be created as a building block, but it could still be created as an outline block to help you identify and fix any possible issues with intersection in the BIM model.

Import thermal properties

If this option is selected then DesignBuilder will load any materials, constructions and glazing system thermal properties present in the Revit model and assign them to surfaces and windows in the model.

Allow open manifold building blocks

Open manifold (non-enclosed) blocks are a special type of DesignBuilder block which are only created when models are imported from BIM. They have one or more surfaces missing which means that they are not fully enclosed, and this has significant consequences on what can be done with the block in the DesignBuilder modeller and in calculations:

- Radiance and CFD calculations cannot be carried out.
- The boolean operations used behind the scenes to manipulate block geometry are not possible and so only limited edit operations may be performed on open manifold blocks. In particular these operations cannot be performed:
 - [Add surface](#)
 - [Drag block face](#)
 - [Mirror](#)
 - [Divide block using cutting tool](#)
 - [Boolean geometry operations.](#)

Because Open manifold blocks cannot use all geometry operations, the orientation of their surfaces cannot be reliably determined from the model and DesignBuilder must rely on the orientation data stored with the surface from the BIM model. This data is not always reliable and so in some cases surfaces are facing in the wrong orientation. The DesignBuilder [Flip block surface orientation command](#) should be used to check and, if necessary fix, the orientation of surfaces in all open manifold blocks.

Import shading surfaces


Shading surfaces are specially marked in gbXML data and so can be treated separately if required. You can choose to import shading surfaces as part of the import or not using this control. Shading surfaces imported through gbXML will be 2-D flat shading surfaces.

Merge co-planar surfaces

If the above Import shading surfaces option is selected, then you can choose to either merge any such co-planar surfaces or not.

Merge Tab

It is sometime necessary to accommodate changes made to the Revit model after significant work has already been done on the energy model on a previous iteration of the design. The settings on the **Merge** tab allow you to retain any settings that you may have added when previously working on the model within DesignBuilder.

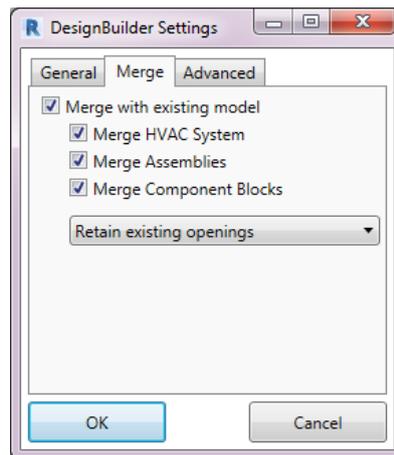

Merge with existing model

This option allows you to load all of the important settings from the DesignBuilder model you most recently worked on into the latest geometry imported from Revit.

In the descriptions below the "old" model refers to the DesignBuilder model you previously worked on whose settings you wish to retain, and the "new" model refers to the DesignBuilder model newly imported from the latest Revit model and needing settings to be loaded from the old model.

Note: To use the add-in merge mechanism, the "old" model must be saved in the default folder using the default filename, typically:

C:\Users\<>Username>\AppData\Local\DesignBuilder\Revit\<GUID>\DesignBuilder.dsb.

This can be done simply by using the Save command in DesignBuilder (not File -> SaveAs).

DesignBuilder also has a manual [Merge Model From File](#) command which can be used if the "old" DesignBuilder model has been saved in a different location or with a different filename.

When the **Merge with existing model** option is used, DesignBuilder makes the following changes to the new model:

- Blocks, zones and surfaces are matched between the old and the new geometry based on their geometry and position. Where an object is matched, all hard-set attributes (those shown in red in model data) are copied over from the old to the new model.
- All user-defined components and templates are copied from the old to the new model.
- If the **Merge HVAC system** option is checked and a Detailed HVAC system was defined in the old model, then it is loaded to the new model. It is important to check that HVAC zone groups contain the right HVAC zones after the merge has been completed.
- If the **Merge assemblies** option is checked, any assemblies defined in the old model are merged into the new model.

- If the **Merge component blocks** option is checked, any component blocks defined in the old model are merged into the new model.
- Openings such as windows, doors etc are merged based on a user-definable selection. The options are:
 - **1-Retain existing openings** where the new openings are kept and the old ones are not copied over.
 - **2-Overwrite all existing openings** where the old openings are copied to the new model replacing all new openings.
 - **3-Merge non-overlapping openings** where the old openings are copied to the new model wherever possible without overlapping with the openings already in the new model.


Note: After using this option you should check that the merge has been completed as required. Note that *any newly added* blocks, zones, surfaces and openings in the updated model will not receive attribute settings from the old model that was merged in.

Summary of the Merge process

1. Open the Revit model in DesignBuilder.
2. Make any modifications within DesignBuilder and save it as the “old” model. **It must be saved in the original folder with the original filename to use the merge process within the add-in.**
3. Close DesignBuilder.
4. Make any necessary modifications to the Revit model.
5. Check the **Merge with existing model** options on the DesignBuilder Settings dialog as required to ensure that the previous modifications are merged.
6. Open the revised Revit model in DesignBuilder.
7. Check that that the modifications in the “old” model have been carried across to the “new” model.

Revit Export Tab

Settings on the Revit export tab provide some control over the export method to be used at the Revit end of the transition process.

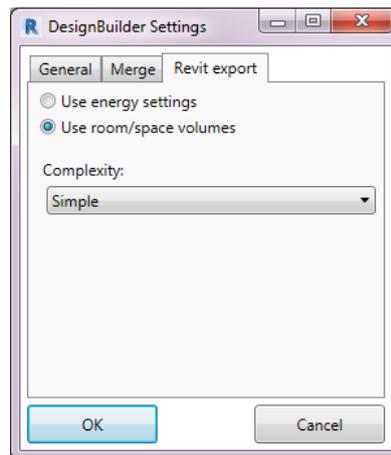

Use energy settings

Check this option to use the EAM when generating the gbXML within Revit.

Use room/space volumes

Check this option to use the AM when generating the gbXML within Revit.

Complexity

Select the option to specify the level of detail provided for openings, and whether shading surface information is exported. Shading surfaces are surfaces that are not adjacent to any space and include surfaces that create a solar obstruction.

- **Simple** - curtain walls and curtain systems are exported as a single opening (without individual panels).
- **Simple with shading surfaces** – the default option, same as simple, but with shading surface information exported.
- **Complex** - curtain walls and curtain systems are exported as multiple openings, panel by panel.
- **Complex with shading surfaces** - same as complex, but with shading surface information exported.

Shading surfaces are not associated with any room/space (roof overhang, free-standing wall).

- **Complex with mullions and shading surfaces** - same as complex, but with mullion and shading surface information exported.

Mullions in curtain walls are exported as shading surfaces. A simple analytical shading surface is produced from mullions, based on the centerline, thickness, and offset.

3. Exporting the gbXML file from Revit (Methods 2 and 4)

This section summarises how to transfer the Revit model through a manual export/import process which is equivalent to the processes automated by the DesignBuilder Revit add-in described above. The process involves [exporting your design as a gbXML](#) using the Export gbXML dialog built into Revit. The resulting gbXML file contains energy information for the model according to the gbXML file structure. The gbXML schema was created to help building designers get information about the


energy consumption characteristics of their building projects. For more information about gbXML, visit <http://www.gbxml.org>.

The steps involved in the manual export/import process are as follows:

- a. **Set up the AM or EAM.** Once you have correctly set up the analytical model as described below in the section [Preparing the Energy Analytical Model](#) (when using the **1-Use Energy settings** Revit export method) or [Preparing the Analytical Model by adding Rooms](#) (when using the **2-Use Rooms/Spaces_Volumes** Revit export method) you are ready to export to DesignBuilder.
- b. Export the gbXML file by clicking on **File tab** > **Export** >  **(gbXML)**. You will then be presented with a dialog which allows you to choose which of the 2 export methods to use:

1-Use Energy Settings


- c. In the **Export gbXML** dialog, if you wish to use the EAM method then select the **Use Energy Settings** and click OK.
- d. In the **Export gbXML -> Save to Target Folder** dialog, navigate to the desired location for the exported file, specify a file name, and click Save. Revit exports the EAM to a gbXML file in the specified location.

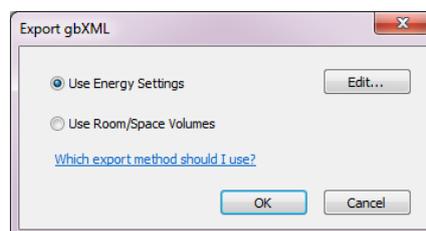

This method exports the energy analytical model (EAM) created by Revit. The EAM is composed of analytical spaces and analytical surfaces, which are automatically created based on parameters defined in the Energy Settings dialog. The exported data provides an accurate energy model for analysis. Before using this method, define parameters in the Energy Settings dialog and create an EAM. For more information, see section [Preparing the Energy Analytical model](#).

2-Use Room/Space Volumes

- c. In the **Export gbXML** dialog, if you wish to use the AM method then select the **Use Room/Space Volumes Settings** and click OK.
- d. In the **Export gbXML -> Save to Target Folder** dialog, navigate to the desired location for the exported file, specify a file name, and click Save. Revit exports the EAM to a gbXML file in the specified location.

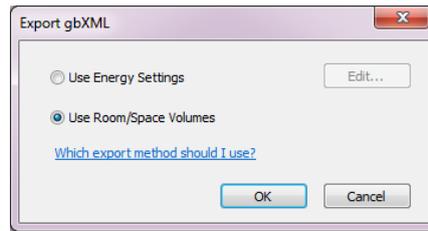

This method uses volumes defined in the building model based on rooms or spaces in the model. Before using this method, you must add rooms or spaces to the model. For more information, see section [Preparing the Analytical Model by adding Rooms](#).

For both **1-Use Energy Settings** and **2-Use Room/Space Volumes** methods the final steps within DesignBuilder are the same:

- e. **Import gbXML file to DesignBuilder.** Once the gbXML file has been exported you can manually [import](#) it into DesignBuilder to perform an energy analysis.
- f. **Check the DesignBuilder model.** See [Example Cases](#).

4. Preparing the Energy Analytical Model

This section explains the steps involved in setting up the EAM in Revit. After creating an energy analytical model, you can either open the Revit model in DesignBuilder through the add-in (method 3) or export the model to DesignBuilder using the **Use Energy Settings** option (method 4).

To create the EAM follow these steps:

- 1- Open a 3D view of the model.
- 2- Create an energy analytical model by clicking on the **Analyze** toolbar tab on the Energy

Optimization panel click on the **Create Energy Model** icon.




Optional steps to adjust energy settings and update the EAM before exporting it:

- 3- Click the **Energy Settings** icon to open the [Energy Settings dialog](#).
- 4- Check and change any settings as required. See detailed information in the **Energy Settings dialog** section below.
- 5- If you make any changes you must update the EAM to reflect the changed settings. To do this [delete and recreate it](#).

Energy Settings dialog

The energy settings control the behaviour of the energy model creation. They also control the optional use of additional information specified in the Revit model, such as material properties and thermal space properties. These settings are used the same way regardless of whether you are using the Add-in or manual export/import.

To open the Energy Settings dialog, click Analyze tab ► Energy Optimization panel ►  (Energy Settings).

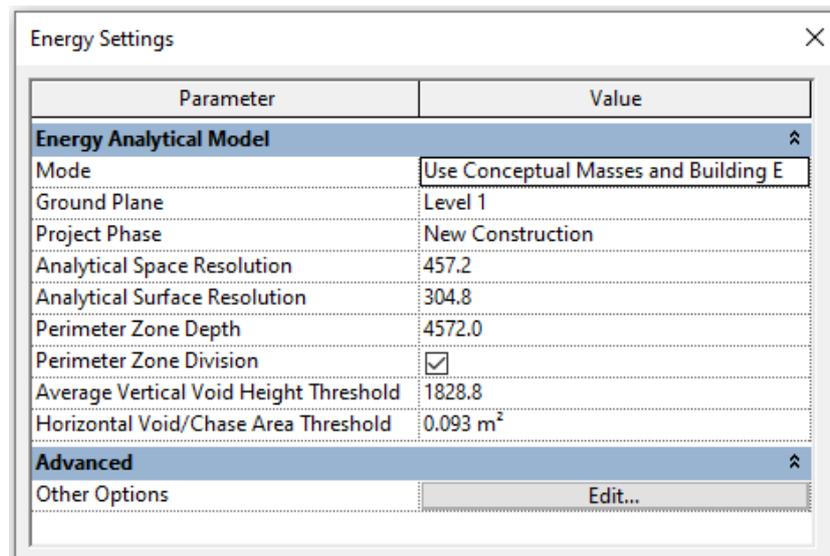

When performing the first export, you do not need to change the energy settings. Learn the overall paradigm of creating energy models for Revit before changing the default energy settings.

Note: The instructions in the online help assume that the Energy Settings dialog uses the default values. These are the default settings for Revit 2017 and later models. If you have an older model or have previously used Energy Analysis for Revit with different settings, you should review the online help to learn the impact of these settings.

Mode

Revit offers 3 modes for creating the energy model from the architectural model. For all cases, however, you should use the default mode: Use Conceptual Masses and Building Elements.

This mode does not require that the architectural model include both conceptual masses and building elements. You can use this mode when the model contains only masses or only building elements. It also supports a mix of the 2 types of elements, which is useful when performing energy analysis using the [Mixed Design method](#).

The other modes relate to legacy behaviour. They are provided only to support older models. Some advanced energy settings relate only to these legacy modes; those settings are unavailable when the mode is set to Use Conceptual Masses and Building Elements.

Ground Plane

Specify the level below which the energy model surface is assumed to be in contact with the ground for heat transfer.

For a building where the ground floor is partially underground (for example, built into a slope), use the level with the most exposure as the ground plane. The differences in the resulting energy analysis are typically fairly minor.

Project Phase

All building elements and/or conceptual masses assigned to the specified phase or an earlier building phase are included in the energy analysis. Elements and masses assigned to a later building phase are omitted from the energy analysis.

Analytical Space Resolution and Analytical Surface Resolution

The [Analytical Space Resolution](#) parameter and the [Analytical Surface Resolution](#) parameter provide important information used by the algorithm that generates the energy model.

The default values for these parameters provide an optimum balance between energy model accuracy and processing time for most Revit models. However, because Revit model size, complexity, and quality can vary widely, you may need to modify these parameters to provide greater accuracy or to reduce processing time of the energy model, or both.


When you increase the values for Analytical Space Resolution and Analytical Surface Resolution, the processing time required to create the energy model is significantly reduced. Conversely, when you reduce the values for these parameters, the processing time required to create the energy model increases.

Reducing these values does not necessarily result in a more accurate energy model. For example, while a lower Analytical Space Resolution value can result in smaller gaps between Revit elements, it can also lead to the omission of some analytical spaces due to gaps between architectural elements that were ignored at the higher setting.

Experiment with different values in various models to understand how these parameters work. See also [About the Energy Model Creation Process](#), [About Spaces in the Energy Model](#), and [About Surfaces in the Energy Model](#).

Perimeter Zone Depth

Specify the distance to measure inward from the exterior walls to define the perimeter zone. This setting should always be used in conjunction with the Perimeter Zone Division setting.

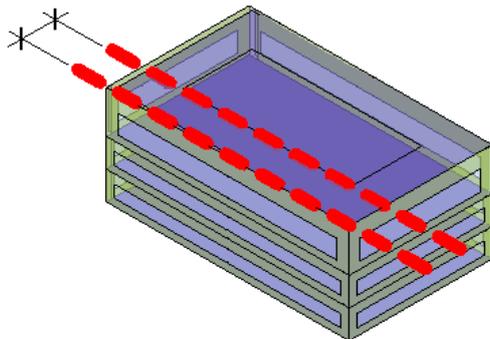


The core of a building has heating and cooling loads that differ from the perimeter because it is not directly exposed to external weather conditions or daylight through windows. A typical perimeter zone depth is 12-15 feet (4-5 m).

Setting the perimeter zone depth is a valuable part of automatic thermal zoning, especially for buildings with large open plans or for early massing studies. For more information, see [About Spaces in the Energy Model](#).

Perimeter Zone Division

Select this option to divide the perimeter of the building (excluding the core) into discrete thermal zones. This setting should always be enabled when the Perimeter Zone Depth is greater than zero.

Perimeter zones result in more accurate energy consumption estimates. For example, in the late summer afternoons, a west façade may encounter solar heat gain while the east façade does not. Perimeter zoning allows energy analysis of these perimeters to be handled separately. For more information, see [About Spaces in the Energy Model](#).

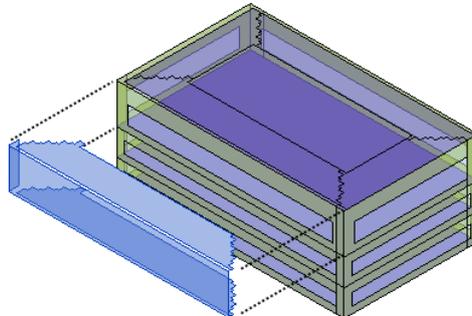

Note: you may find that it is easier to avoid using this automation in Revit and instead do any perimeter zone division that may be required manually in DesignBuilder.

5. Preparing the Analytical Model by Adding Rooms

After using Revit to create an analytical model, you can either export the model to DesignBuilder directly in Revit using the **Use Rooms/Spaces Volumes** option (method 1) or through the add-in (method 2).

Preparation of the Revit analytical model is crucial to the success of the transition process. The analytical model is based around the definition of rooms which are superimposed on the underlying Revit architectural model. Any gbXML subsequently generated is based on the analytical model only and not on the underlying Revit architectural model. It is usually possible to create and make changes to the analytical model without modifying the underlying Revit model.

Defining Rooms

Rooms

Revit Rooms maintain information on sub-divisions of space within the building. In simple terms a room could literally be a room from the actual building or in some cases a collection of real world adjacent rooms. Rooms store values for a variety of parameters that affect subsequent building performance analysis such as volumes and the geometry of bounding elements.

[Rooms](#) are identified based on bounding elements such as walls, floors, roofs, and ceilings. Revit refers to these room-bounding elements when computing the perimeter, area, and volume of a room. You can turn on/off the “Room bounding” property of these elements allowing flexibility in

how rooms are configured. You can also use room separation lines to further subdivide space where no room-bounding elements exist. When you add, move, or delete room-bounding elements, the room's dimensions update automatically.

Note: An effective export can only be accomplished if all the areas in your model are defined by the Room components in the building model and the entire volume of the building model is included.

The gbXML data exported from Revit is based mainly on rooms and their bounding elements. The DesignBuilder gbXML import mechanism identifies and converts these rooms into blocks and zones. Other building components like doors, windows and shading surfaces are created automatically as well.

Note: Revit “Rooms” and “Spaces” are very similar but independent components used for different purposes. “Rooms” are architectural components used to maintain information about occupied areas. “Spaces” are exclusively used for the MEP disciplines to analyse volume. For the rest of this tutorial, except where distinctions are drawn, the terms “Space” and “Room” are used interchangeably.

Room Geometry

At the point when rooms are applied to the Revit model it is important that each room is fully bounded by a set of surfaces of the appropriate type. Otherwise the gbXML generated is likely to have incorrect geometry, missing or invalid walls, internal surfaces with exterior adjacency etc.

To help avoid these issues you should follow the rules below.


1. Avoid overlapping walls or two walls in parallel contact with each other. If your model has one of these issues you can resolve it by either replacing the 2 walls with an equivalent thicker wall or set one of the walls to be non-room bounding so it is ignored during the room generation process.
2. Avoid combining room separation lines and walls.
3. Avoid floors and ceilings made of multiple parallel elements. As with walls you can either replace 2 parallel floors/ceiling surfaces with a single equivalent element or you can set the inner element to be non-room bounding.
4. Avoid any gaps in walls, roofs, floors etc that would cause rooms to “leak”.
5. Exterior wall and ground floor elements must be have the “Exterior” function set to ensure the correct adjacency in the gbXML.
6. Room separation lines can be used to separate one room from another where room bounding elements are not already in place, for example to form a boundary between two parts of an open plan space which do not have a wall between them. Otherwise they should not be used and in particular they should not overlap walls or any other room separation elements.

Room Boundaries

The [Volume of a Room](#) is defined by limit parameters and [Room-Bounding Elements](#). If room-bounding elements occur within the range of the room's defined limits, Revit uses the space defined by the room-bounding elements when computing the volume.

In Revit the [Upper Boundary](#) (Upper Limit, Limit Offset, Level) and [Lower Boundary](#) (Base Offset) parameters define the height of the room.

In the example shown below left, the false ceiling is a room-bounding element at 2400 mm above floor height. It occurs *below* the upper limit of a room specified with 2700 mm height. In this case Revit computes the room volume up to the room-bounding element and the ceiling void is not included in the analytical model.

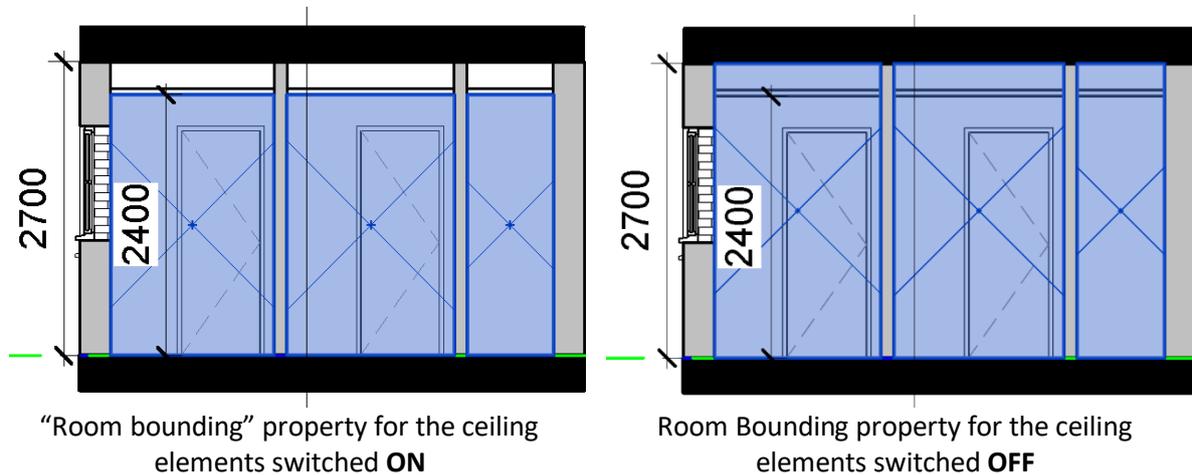

The false ceiling volume (indicated in white in the diagram above left) is not included in the zone volume which is shown in blue. In this case, you could turn off the Room Bounding property for the ceiling elements to ensure that the zone includes the ceiling void volume within the main occupied zone. This change is shown in the diagram above right.


Note: you can easily add [zone voids](#) in DesignBuilder to obtain the correct zone volume etc.

Defining the upper boundary of a room

Together, the Upper Limit and Limit Offset parameters define the upper boundary of the room.

The following figure shows two samples of Rooms with these parameters defined:

- Room Zone A is double-height and has an Upper Limit of Level 0 and a Limit Offset of 6000.
- Room Zone D has an Upper Limit of Level 1 and a Limit Offset of 3000.

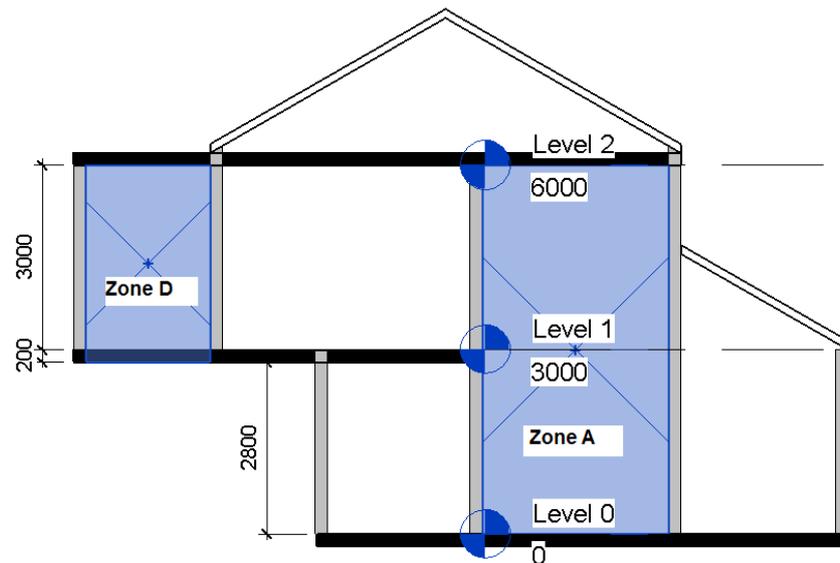

Defining the lower boundary of a room

Together, the Level and Base Offset parameters define the lower boundary of a room.


For the model above, the defined parameters are:

- Room Zone A has a Base Offset of 0. The lower boundary of the room starts at Level 0, i.e. from the top of the ground floor slab.
- Room Zone D has a Base Offset of -200 . The lower boundary of the room starts 200 mm below Level 1. This allows the volume of the external floor slab to be included within the volume of the room. This is indicated by the highlighted blue shading overlapping the external floor slab element in the figure above.

Zone Volume computations


The volume computation for a space is based on its room-bounding components and is calculated as the area of its base multiplied by the height of the space. In Revit, both area and volume are calculated to wall faces.

By default, Revit does not compute room volumes. You must switch on “Area and Volumes” in the Volume Computations panel under the Computations tab of the Area and Volume Computations dialog before exporting your model (see [Enabling Volume Computations](#)).

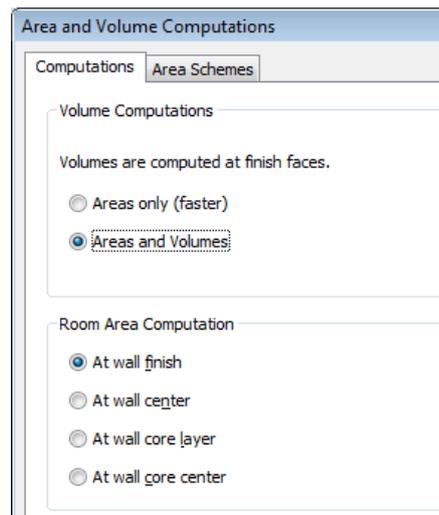


The Revit section views below illustrate the effect of these settings on the exported DesignBuilder model.

“Areas only (faster)” Volume Computations option - incorrect zones are created in the DesignBuilder model.

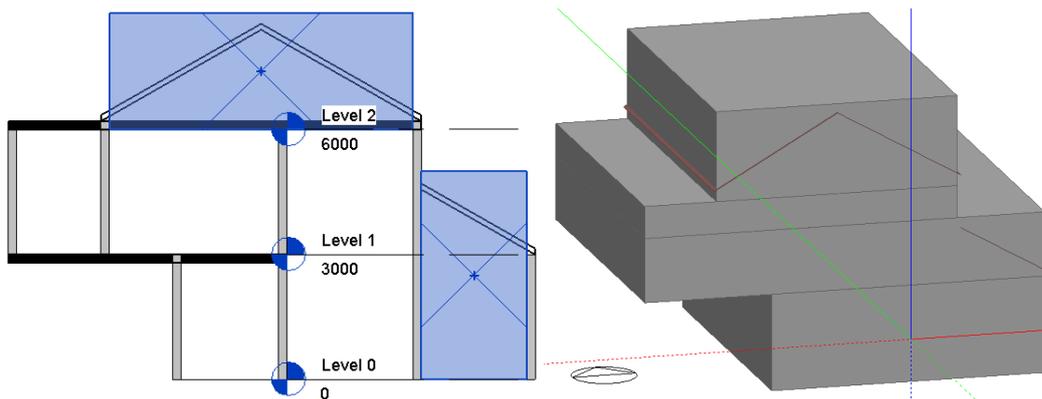

“Areas and Volumes” Volume Computations option – correct zones generated in the DesignBuilder model below.

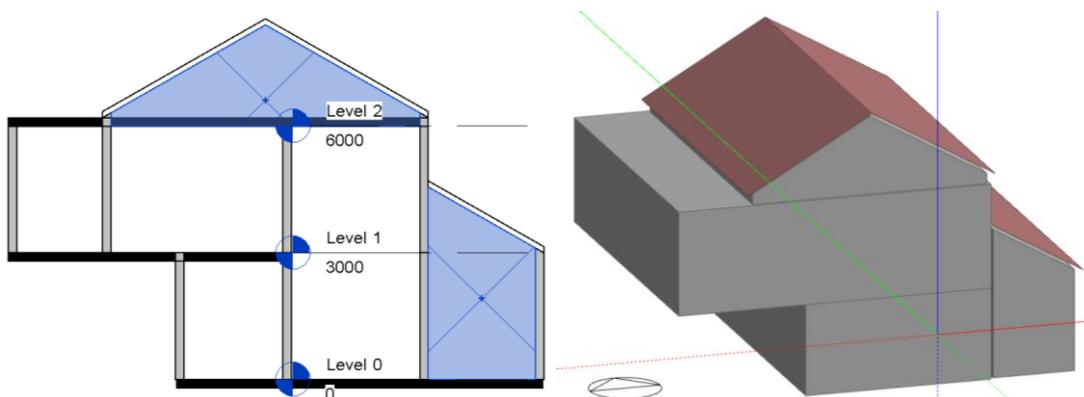


The Room volume defined in Revit should be approximately the same as the zone volume in DesignBuilder.

Placing a room

It is necessary to [Create a Room](#) for all spaces occupied and unoccupied before generating the gbXML or to use the add-in. After you have placed room components in all the areas in a plan, you can export your design as a gbXML file to perform a load analysis of your model in DesignBuilder software.

In order to facilitate the visualisation of the rooms you can [Control the Visibility of Rooms](#) to make rooms and their reference lines visible as well as [Color Schemes](#).

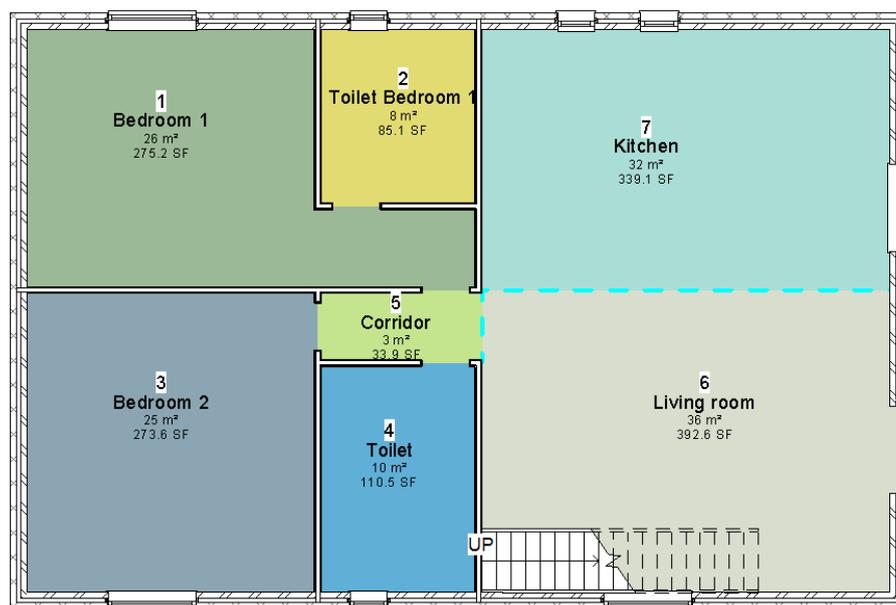

You can use the [Room Separation Lines](#) tool to add and adjust room boundaries. They are useful for designating one room within another when there aren't walls. In the sample above Room separation lines are room-bounding between the kitchen, living room and corridor zones.

Note: It is possible to place the [Rooms automatically](#) in all closed bounded areas. In other areas the room placement must be carried out manually.

Checking the Analytical Model

Before exporting to gbXML you should check for potential problems that might affect the success of the transition process. It is also important to make sure that the model is correctly configured for export. We advise these checks on the Revit model before attempting the export:

1. Check Revit Rooms
2. Check individual zone volumes


These are described below.

Check Revit Rooms and Volumes


The first test allows you to verify the model through the [Export gbXML](#) dialog, which can be accessed from the upper right corner by clicking on the “Export gbXML” menu entry from the File menu. The dialog has two tabs, General and Details.

On the Details tab it is possible to check for possible warnings. If a warning is displayed for the Room, you should check the cause (see figure below), cancel and correct the problem in the building model. Review and correct warnings until all have been resolved throughout the model to avoid the problem carrying through to the DesignBuilder model.

For example, in the figure below warnings in the Room 2 and Room 3 are shown on the dialog details tab.

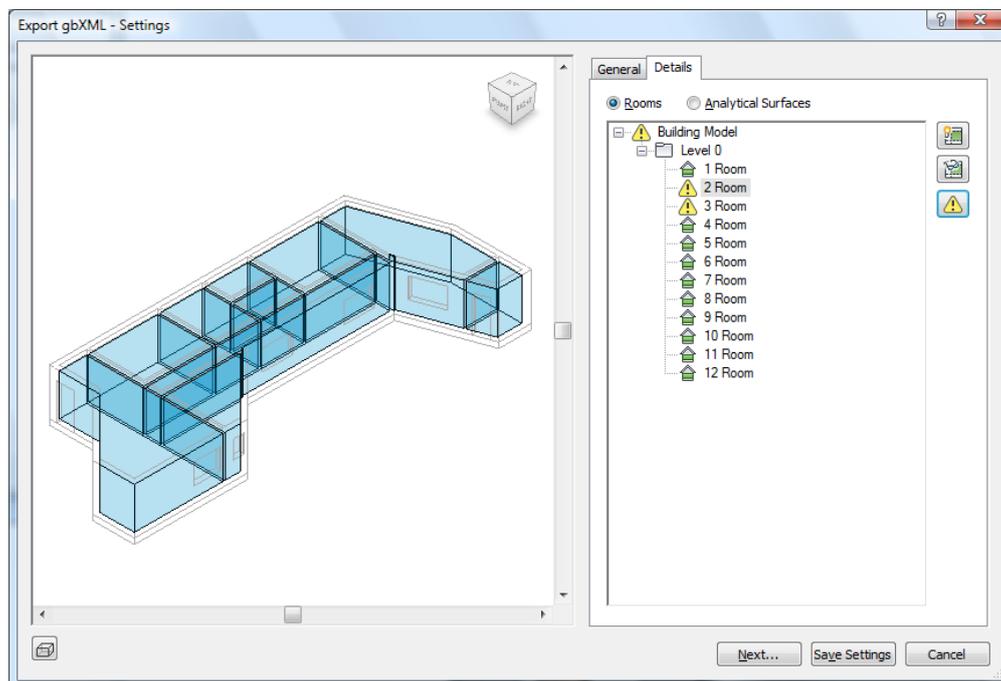

You can use the Export gbXML dialog to visually detect gaps between zones in the analytical model. You should generally aim to avoid gaps in the analytical model to ensure correct zone volumes and adjacencies in the DesignBuilder model. For example in the model below you can see gaps (shown in white) between the 3 floors of the model.

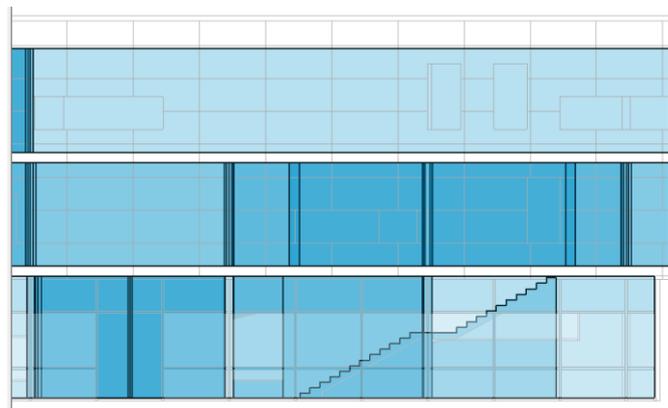


In this case the gaps were eliminated from the analytical model by using the steps explained in the [Room Boundaries](#) section.

Tips

Assign Rooms to all Areas of the Building and Checking for Gaps


You should make sure to assign rooms to all areas within the shell of the building, including any voids, lifts, risers etc. Any areas that are not covered by a room will not be included in the model imported to DesignBuilder causing unexpected gaps to appear in the model geometry.

You can check that the rooms connect fully by applying a Color fill scheme for spaces and set model display style to wireframe. Any white areas between rooms indicate gaps which will cause issues when the model is imported to DesignBuilder, especially if the gaps are wider than the [Adjacency separation tolerance](#) used for the import.

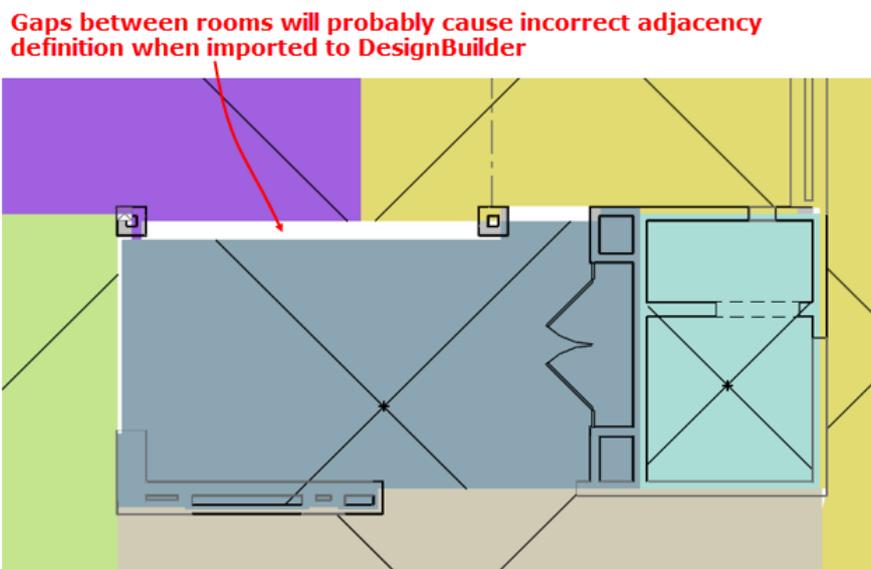


Ensuring Rooms are Enclosed

Rooms in Revit must full a fully enclosed region. When Revit fails to identify a room as expected, the first step is usually to check the surrounding elements. For example, the figure below shows a case of a non-enclosed region that was solved by attaching the walls to the pitched roof.

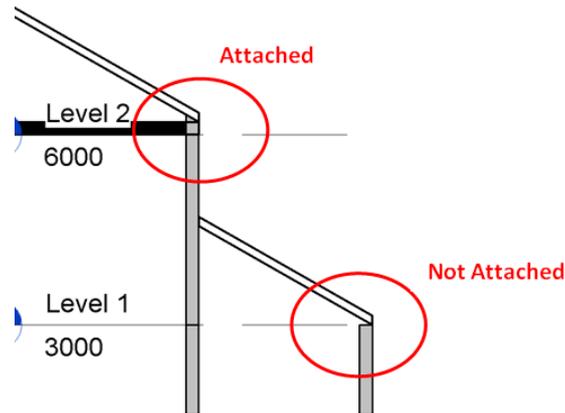


Excluding Elements from the Energy Model

Some elements should not be included as part of the energy model. In Revit, you can switch on/off the Room Bounding parameter of many elements. In the example below the room-bounding setting of the structural columns should be switched off to avoid seeing columns appearing in the DesignBuilder model.

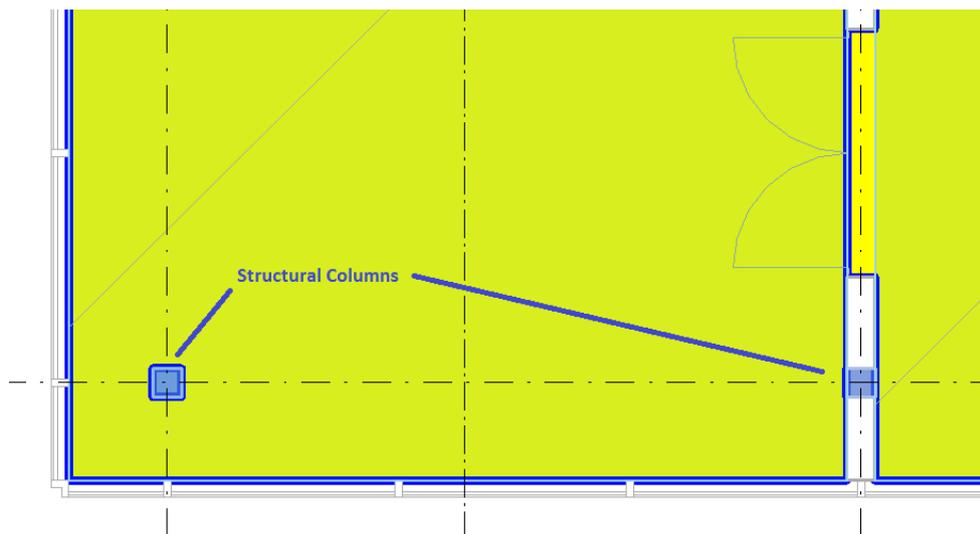


Another example is shown below where the round column on the corner was switched off by de-selecting “room bounding” on the properties dialog to avoid complex surfaces in the energy model.

Before Fix

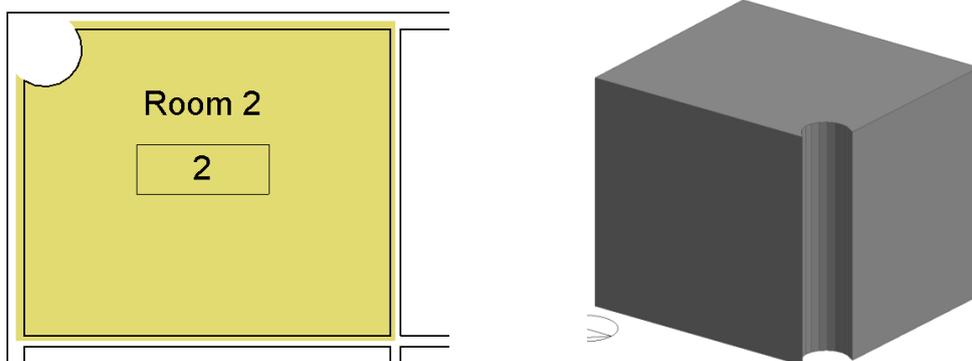

The Revit model and the corresponding DesignBuilder model before the change, with the column being a room bounding element.


After Fix

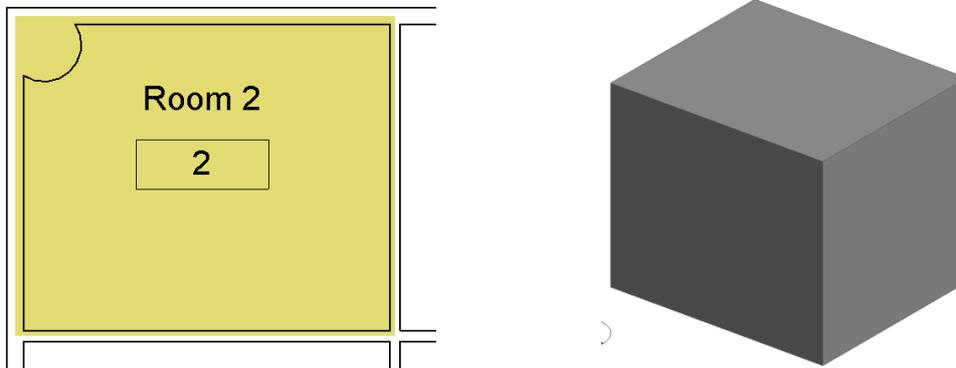

The Revit room and the corresponding DesignBuilder zone after de-selecting the column as a room bounding element. The DesignBuilder model following the fix will be more accurate and because there are less surfaces, calculations will run faster.

Merging Zones


It is possible to merge multiple similar zones by switching off the elements between the Rooms. In the model below, Rooms 3, 4 and 5 have been merged into 1 Room by switching of the “Room bounding” element property of the walls between them. The merged zone is shown in grey in the figure below. This method is useful for a preliminary thermal zoning for large models. Note in the DesignBuilder navigator panel (below right) just four zones were created from this model.

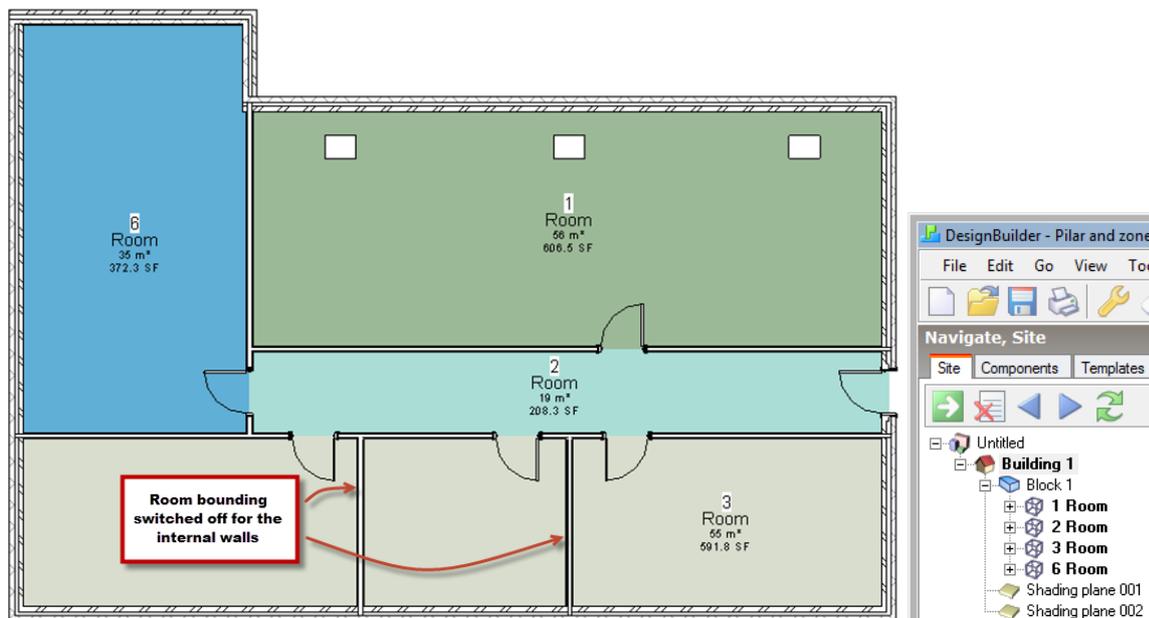

Nested Spaces

GbXML does not currently support “nested” spaces, i.e. spaces wholly contained within another space. It is necessary to split the surrounding room in order to avoid the nested room problem. The

way that this is done is shown below; you can use the “Room separation line” to split them. After this you must place a new room in the separated area.

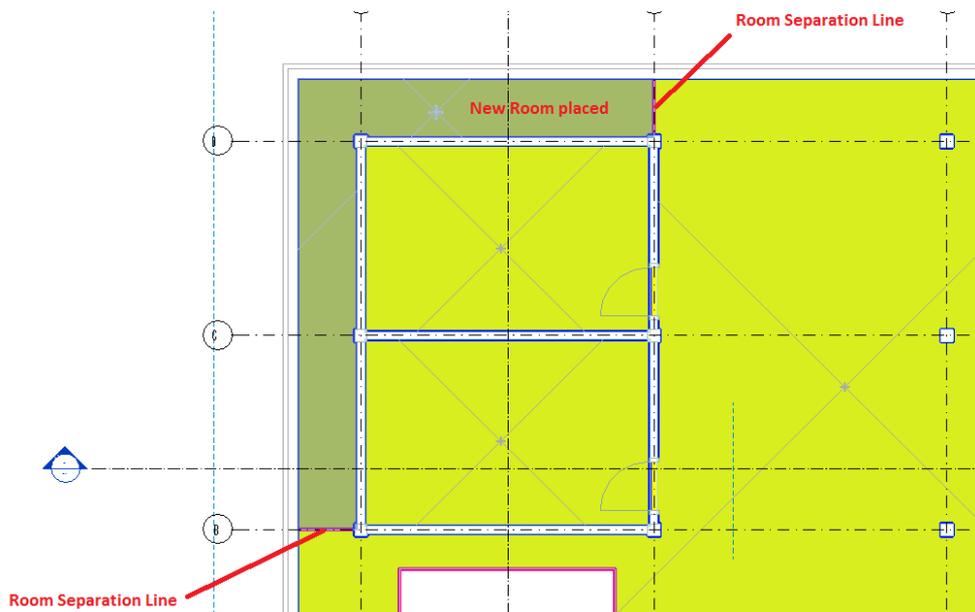

Single Room


There should be only a single room in any one place in the building shell and it is important to avoid any room duplicates.

“Rooms” outside the building

In some Revit models “Rooms” may have been created outside the building shell to represent areas such as balconies or outside entrance areas to allow the floor area to be included for these areas. While these “rooms” may represent usable space to the architect they are not rooms in the sense of needing to be created as zones in DesignBuilder and should be removed.

An alternative would be to represent such area using filled regions.


Avoid Roof Surfaces inside Building

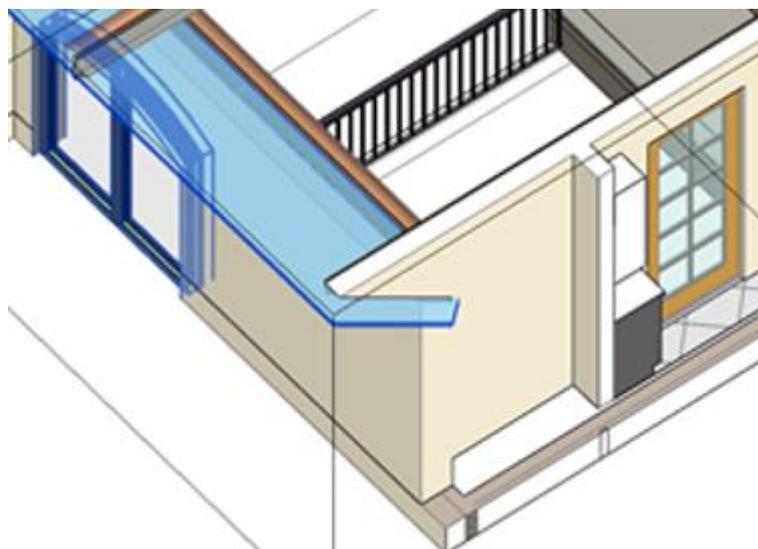

Roof elements should be defined so they end at the external wall to avoid being included within the building and causing issues with the gbXML.

Export gbXML Dialog - Use Room/Space Volumes

When you choose to export the model to gbXML using room/space volumes, use this dialog to specify settings and to validate the analytical model before exporting it.

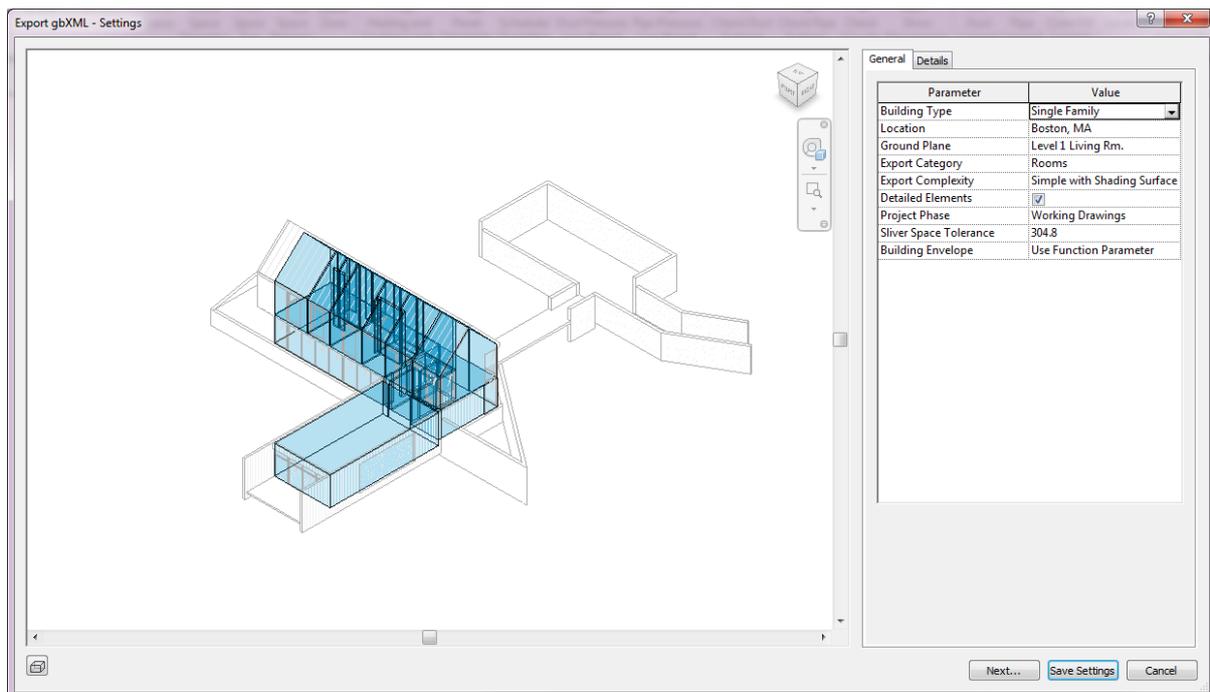

To open the Export gbXML dialog

1. Open a 3D view of the model.
2. Click File tab ➤ Export ➤  (gbXML).
3. In the Export gbXML dialog, select Use Room/Space Volumes.

The Export gbXML dialog displays.

General tab

- g. **Building Type:** Specifies the type of building according to the gbXML schema 0.37 (similar to ASHRAE).
- h. **Location:** Specifies the geographic location for the model. The location establishes the climate and temperatures used in loads calculation.
- i. **Ground Plane:** Specifies the level that serves as the ground level reference for the building. Surfaces below this level are considered to be underground. The default level is zero.
- j. **Export Category:** Determines which information is to be exported and used for analysis: Rooms or Spaces. This setting determines which parameters are available on the General tab, as well as the information displayed on the Details tab.

- k. **Export Complexity:** Specifies the level of detail provided for openings, and whether shading surface information is exported. Shading surfaces are surfaces that are not adjacent to any space, and include surfaces that create a solar obstruction. Simple complexity is used for heating and cooling loads analysis.
- **Simple** - curtain walls and curtain systems are exported as a single opening (without individual panels). Simple is more appropriate for energy analysis.
 - **Simple with shading surfaces** - same as simple, but with shading surface information exported.
 - **Complex** - curtain walls and curtain systems are exported as multiple openings, panel by panel.
 - **Complex with shading surfaces** - same as complex, but with shading surface information exported.

Shading surfaces are not associated with any room/space (roof overhang, free-standing wall).

- **Complex with mullions and shading surfaces** - same as complex, but with mullion and shading surface information exported.

Mullions in curtain walls are exported as shading surfaces. A simple analytical shading surface is produced from mullions, based on the centerline, thickness, and offset settings.

- l. **Detailed Elements:** (available only when Export Category = Rooms)

See [Use Detailed Elements for Material Thermal Properties.](#)

- m. **Project Phase:** Specifies the stage of construction to use for analysis.
- n. **Sliver Space Tolerance.** Specifies the tolerance for areas that will be considered sliver spaces.
- o. **Building Envelope:** Specifies the method to use to determine the building envelope.
- **Use Function Parameter.** (default) This method uses the Function type parameter of walls, floors, and building pads to determine the building elements considered to be part of the building envelope. If a wall has one adjacent space, analytical surfaces originating from the wall are classified as exterior surfaces. If a wall has two adjacent spaces and its function is Exterior, Foundation, Retaining, or Soffit, analytical surfaces originating from the wall are classified as interior surfaces. If the wall's function is Interior or Core Shaft, analytical surfaces originating from the wall are classified as interior surfaces, regardless of the number of adjacent spaces.
 - **Identify Exterior Elements.** This method uses a combination of ray-casting and flood-fill algorithms to identify the building elements that are exposed to the outside of the building, the building envelope. Analytical surfaces originating from the building elements in the envelope are classified as exterior or shading surfaces.
- p. **Building Service:** Specifies the heating and cooling system for the building.
- q. **Schematic Types:** Specifies the constructions type for the building. Click  to open the Schematic Types dialog, where you can specify the materials and insulation (U-values) for the building.
- r. **Building Infiltration Class:** Specifies an estimate of outdoor air that enters the building through leaks in the building envelope.

Infiltration can be specified as:

- **Loose - 0.076 cfm/sqft for tightly constructed walls.**
- **Medium - 0.038 cfm/sqft for tightly constructed walls.**
- **Tight - 0.019 cfm/sqft for tightly constructed walls**
- **None - infiltration is excluded from the calculation of loads.**

- s. **Export Default Values:** (available only when Export Category = Spaces)

Exports user-specified values as well as default values for People, Electrical Loads, Occupancy, Lighting, Power Schedules, and Construction Types. Clear this option to export only user-specified values.

Details tab

When you set Export Category to Rooms on the General tab, the Details tab displays rooms in the model. Select an item in the list, and use the Highlight, Isolate, and Show Related Warnings tools to inspect the item.


When you set Export Category to Spaces on the General tab, the Details tab displays spaces and zones in the model. In addition to inspecting spaces, zones, and related analytical surfaces, you can change related settings. See [About the Details Tab](#), [Specify Heating and Cooling Parameters for Spaces](#), and [Specify Heating and Cooling Parameters for Zones](#).

It can be worth testing various of the above options to see which provide the best translation into DesignBuilder format.

Geometry Conventions


The gbXML generated from Revit uses a centreline convention for exterior elements. This means that the zone geometry imported into DesignBuilder will use the centreline of the Revit model exterior elements as the outside surface of block/zone exterior walls.

For the most accurate modelling of zone floor areas and volumes you can account for the difference in conventions by overriding the DesignBuilder **External wall** thickness to be half of the thickness of the actual walls. For example in the case where the thickness of the external walls in the Revit model is 0.3m, after you have imported the model into DesignBuilder you can override External wall thickness at building level to be 0.15m as shown below.

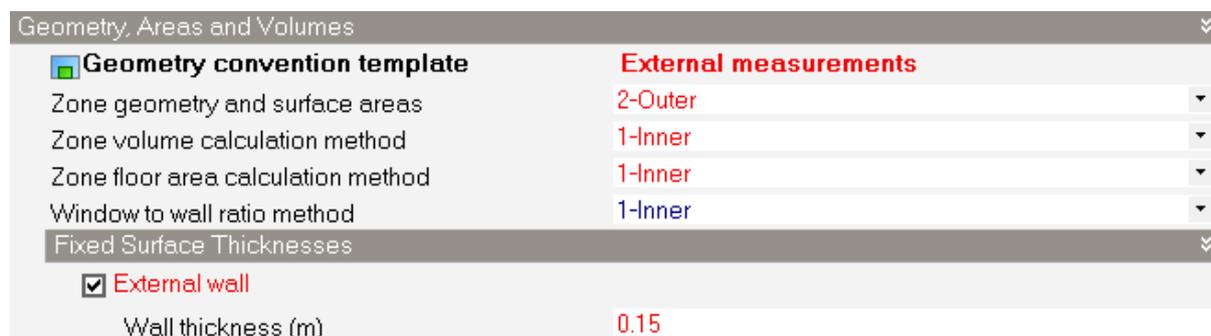

Checking/Fixing the gbXML

The free online [Spider gbXML Viewer](#) provides various checking and fixing tools for gbXML files. This tool is under ongoing development so if the link here does not work by the time you read this you can search online for “Spider gbXML Viewer”.

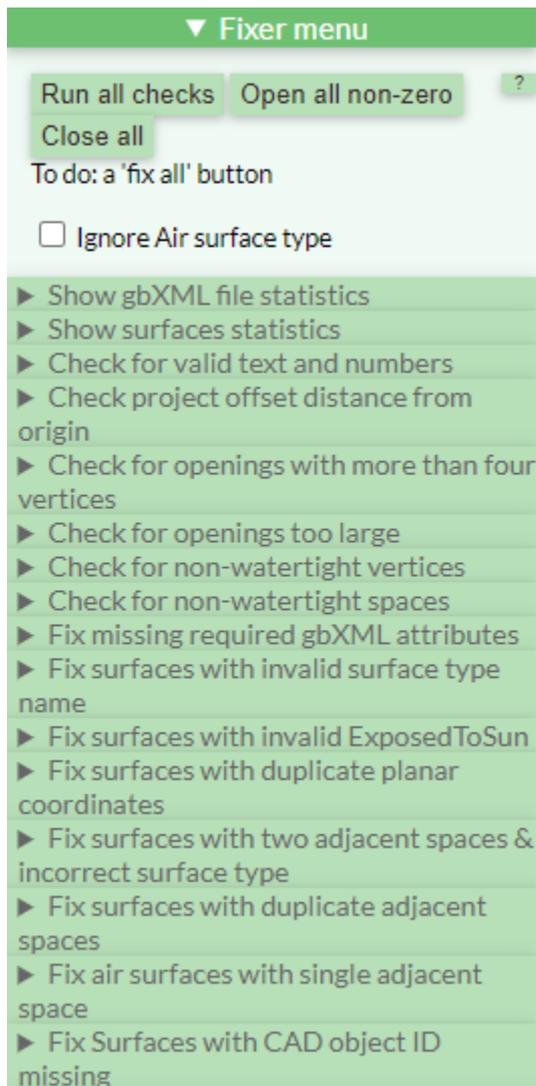

6. Example Cases

The example cases below use the same **rac_basic_sample_project.rvt** sample model provided with Revit to illustrate the overall Revit to DesignBuilder transition process through three different methods:


- **Example 1** - Revit Add-in (Simple with shading surfaces)
- **Example 2** - Revit Add-in (Complex with shading surfaces)
- **Example 3** - Built-in Revit gbXML export

Example 1 - Revit Add-in (Simple with shading surfaces)

In this first example the DesignBuilder Revit add-in is used with default settings to load the **rac_basic_sample_project.rvt** model that is provided with Revit installations into DesignBuilder. The example shows some preparatory steps in Revit to ensure correct gbXML generation, use of the Add-in and some minor tidying in the resultant model in DesignBuilder. It also demonstrates how to set the Revit material and construction thermal properties to ensure that they are accurately carried through into the DesignBuilder energy model.


Steps in Revit

- 1- Open the Revit sample model **rac_basic_sample_project.rvt** from C:\Program Files\Autodesk\Revit 2018\Samples

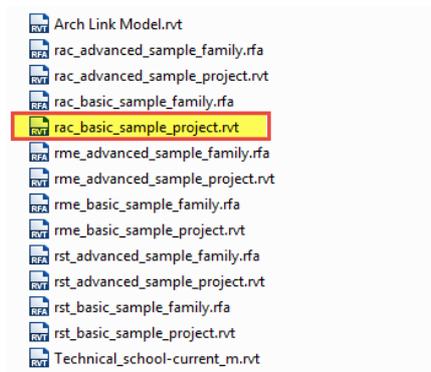


- 2- Unselect the **Room Bounding** settings for some components:

Round column at level 1:


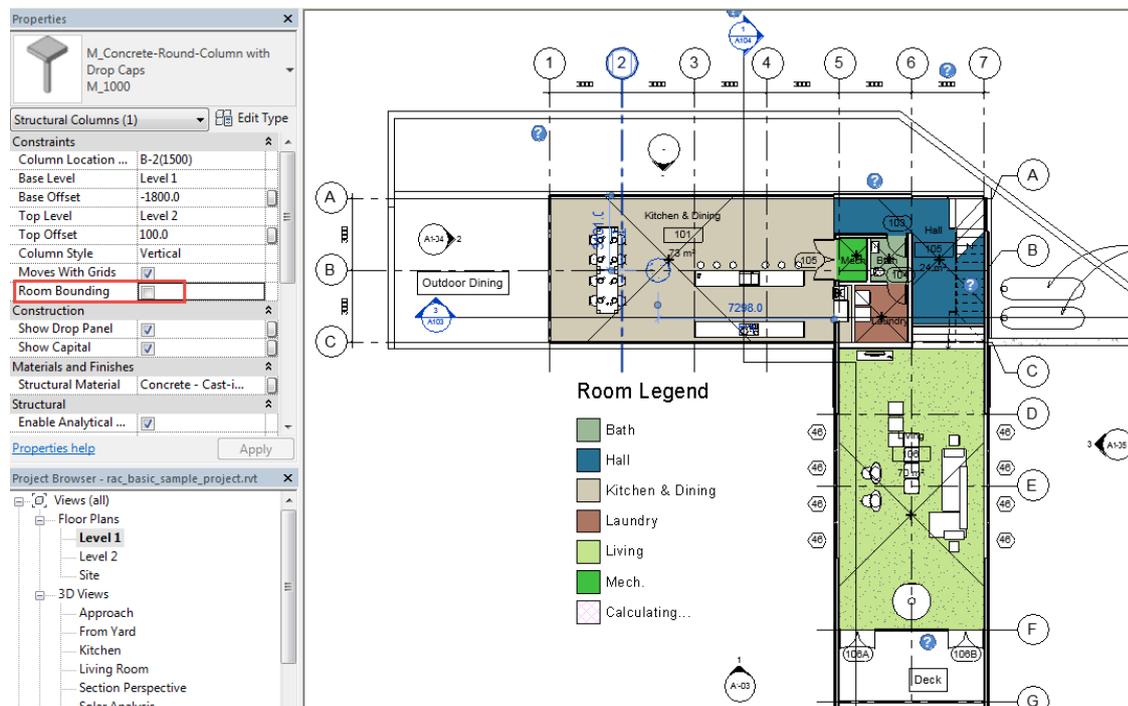


DesignBuilder Revit – gbXML Tutorial

Internal floors:

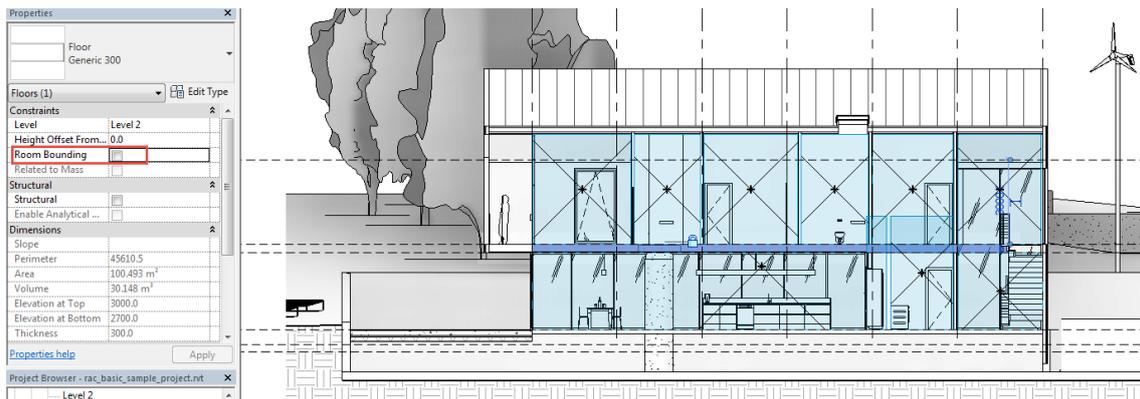

Ceilings:

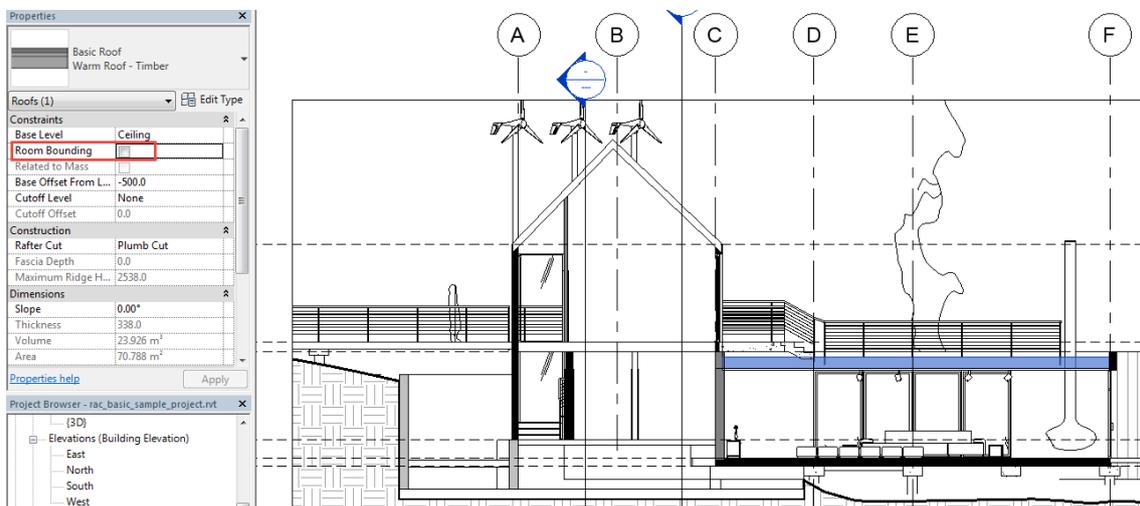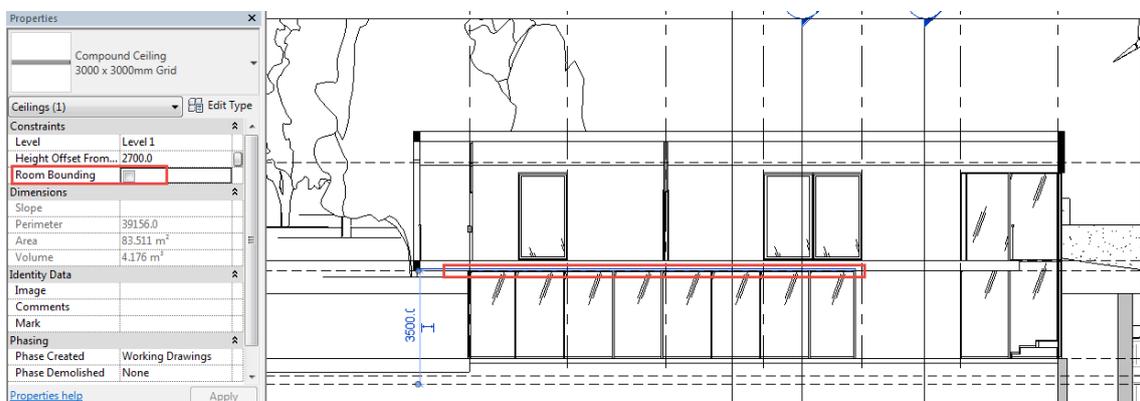


Internal walls:




3- Set the **Limit Offset** and **Base offset**


Room 106 Living

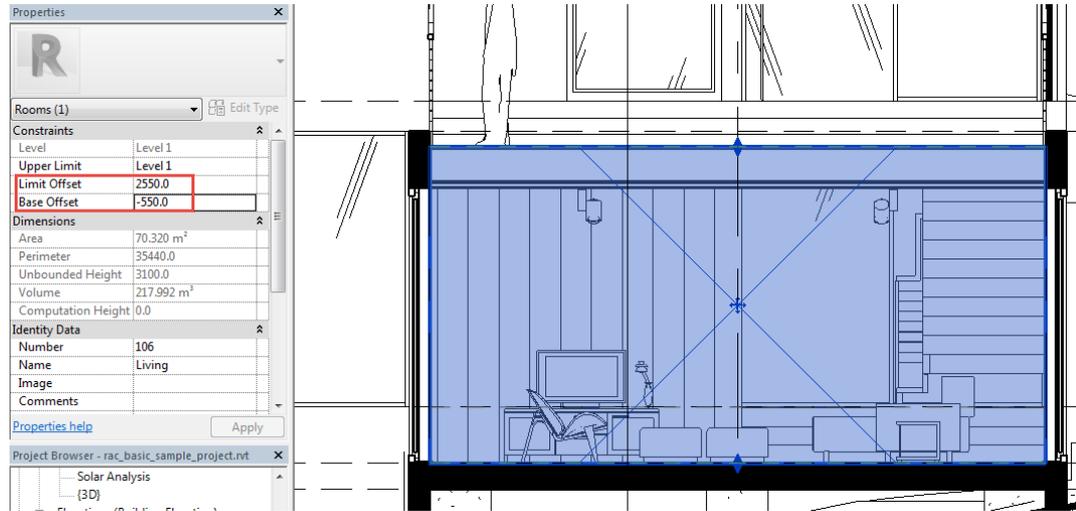


All Rooms in the first floor - Level 2:

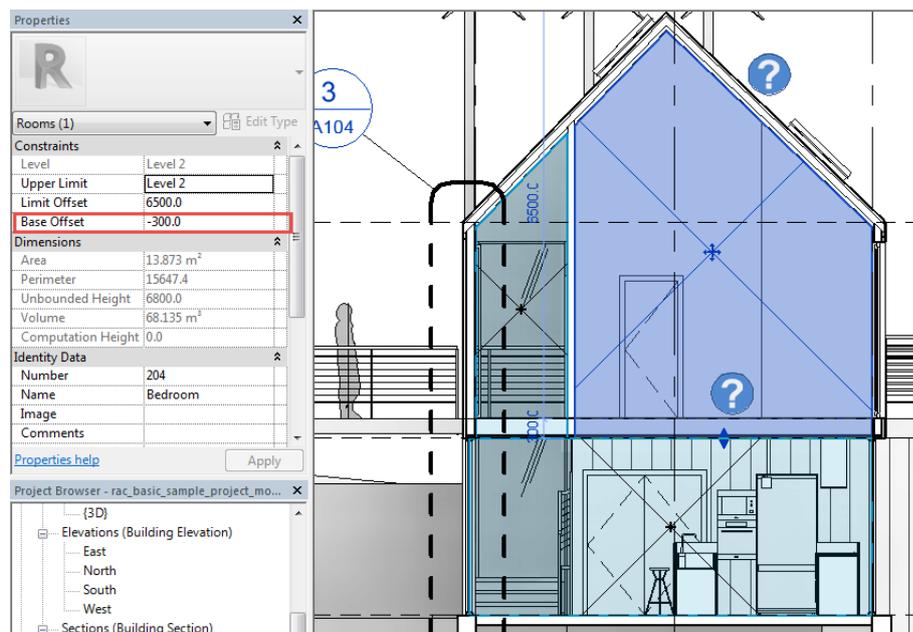


All Rooms in the ground floor – Level 1:

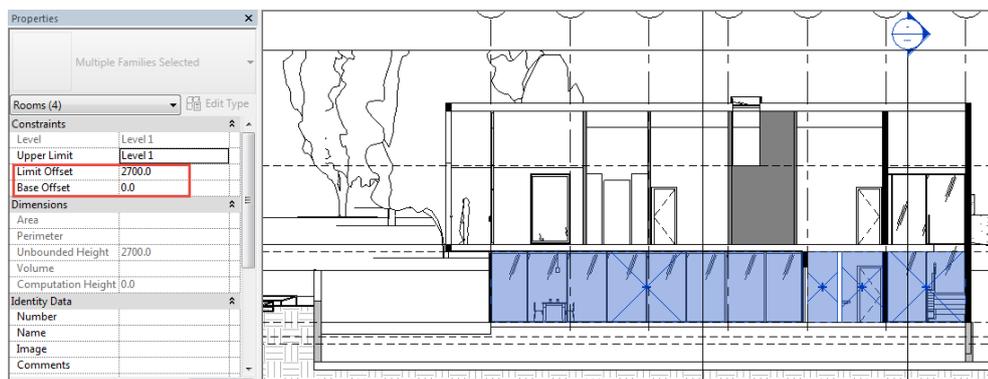

- 4- Open the Add-in Settings from Analyze toolbar and select the options **Use room/space volumes** and **Simple with shading surfaces** at the Advanced tab

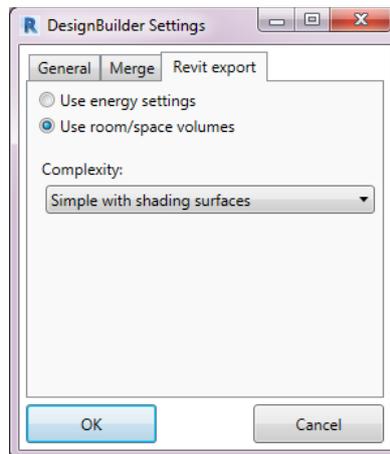


- 5- Click on the DB-Revit add-in icon to open the model in DesignBuilder (Turn off DesignBuilder first if it is opened)

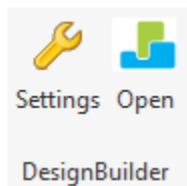


Steps in DesignBuilder


- 6- Delete the windows that are not required in the DB model in zones **205 Bath** and **202 bedroom**.

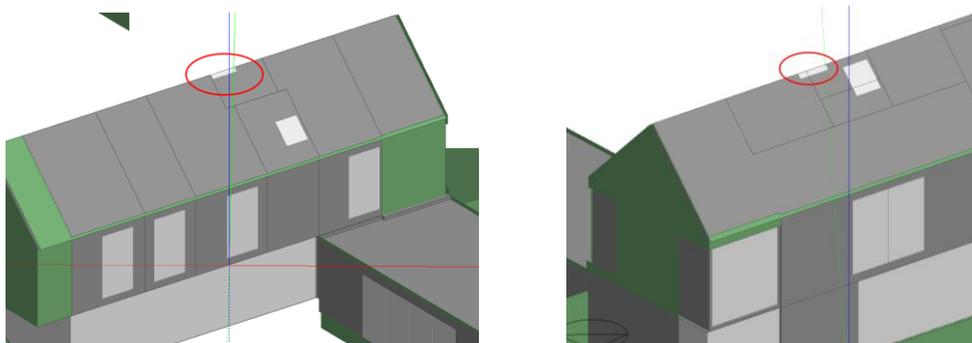

Note: these erroneous windows are included in the Revit Analytical model and hence the gbXML generated by Revit.

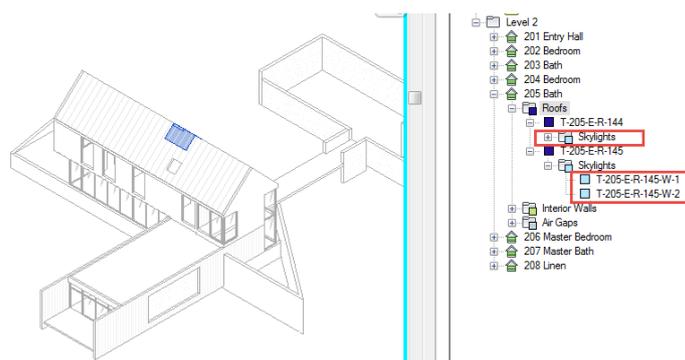

- 7- Adjust the shading surfaces by deleting those not required and creating those that were not imported. For example:

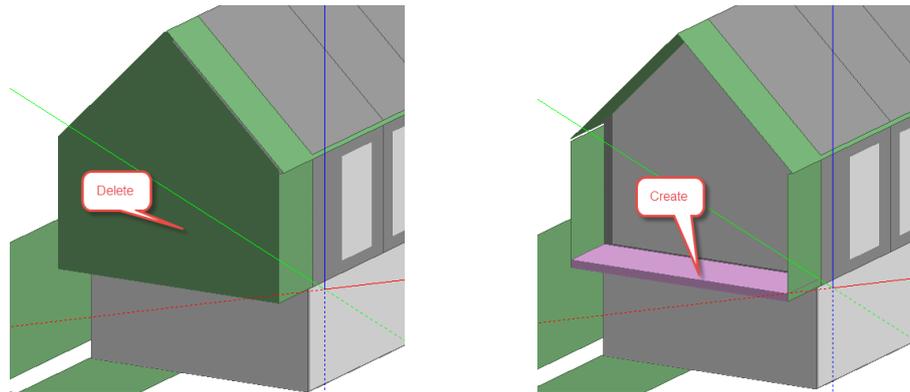


- 8- Check the construction assignment


Once the Revit model has been loaded into DesignBuilder, it is important to check that any construction assignments made in Revit are carried through into DesignBuilder. To do this, navigate to a selection of surfaces to check the construction assignments are set as expected in DesignBuilder. Note that these construction assignments are only made if:

- The [Import thermal properties](#) request was set on the Revit add-in Settings dialog, and,
- The construction and its layers of materials with thermal properties were correctly made in Revit.


For example, in DesignBuilder, navigating to the larger pitched roof surface in **204 Bedroom** we can see that the **Basic Roof SG Metal Panels roof** assignment has been made:

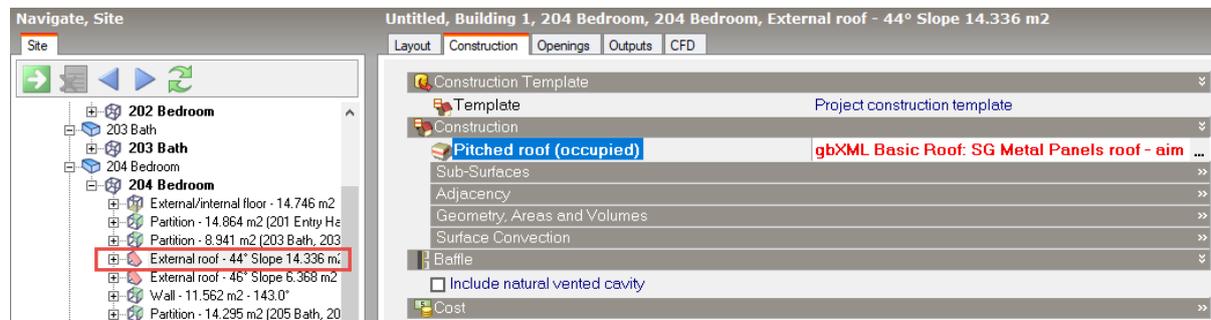


The equivalent settings in Revit can be checked as follows. Navigating to the equivalent roof surface in Revit you can see that the **Basic Roof SG Metal Panels roof** has been set:

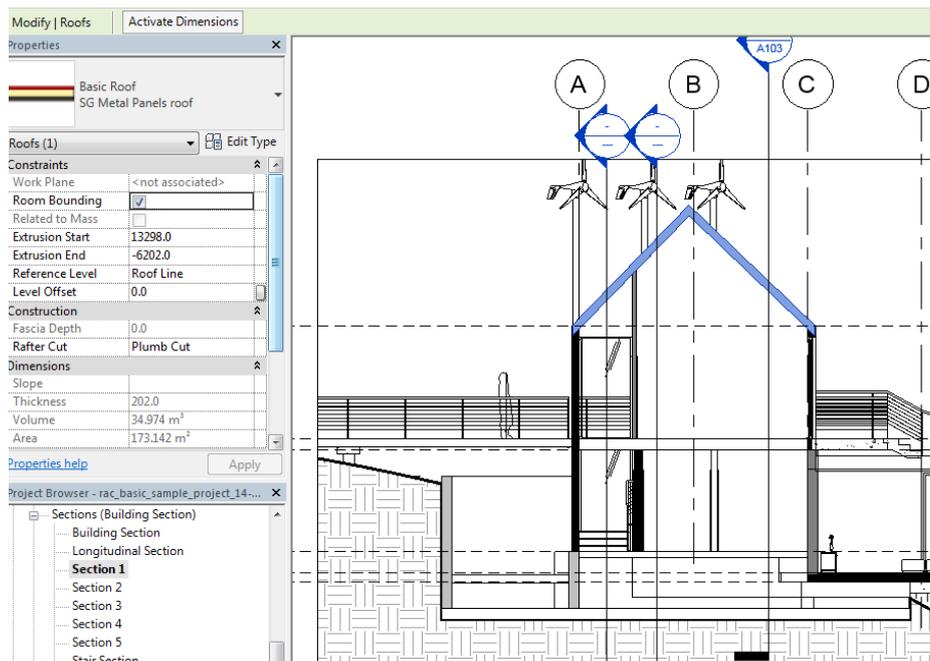


You should see that in this Revit assembly is made up of four material layers. However, the thermal properties for **Roofing – Metal Standing Seam** and **Wood – Furring** have not been set up:

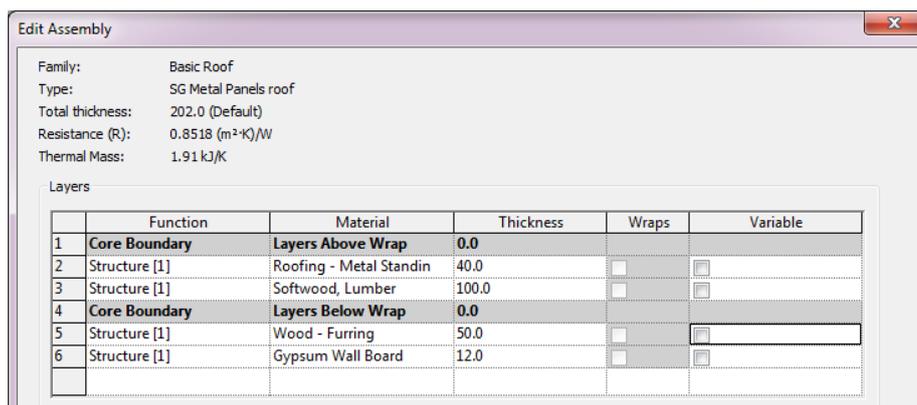


Material **Roofing – Metal Standing Seam** (image below) doesn't have thermal properties. The **Edit Assembly** dialog itself does not indicate any missing thermal properties so it is important to check that thermal property data has been entered at material level for all materials used:

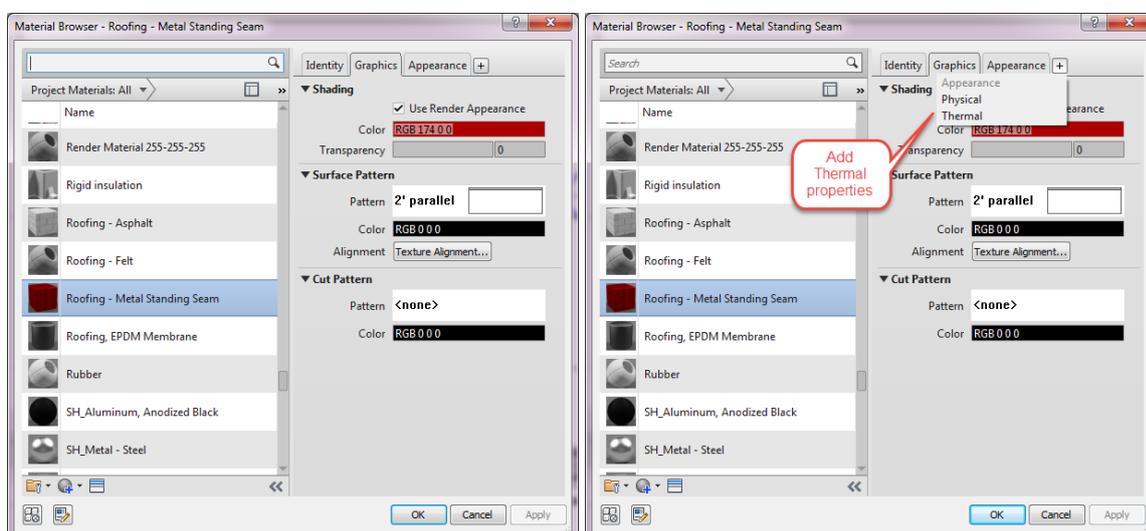


Material **Softwood, Lumber** does have thermal properties:

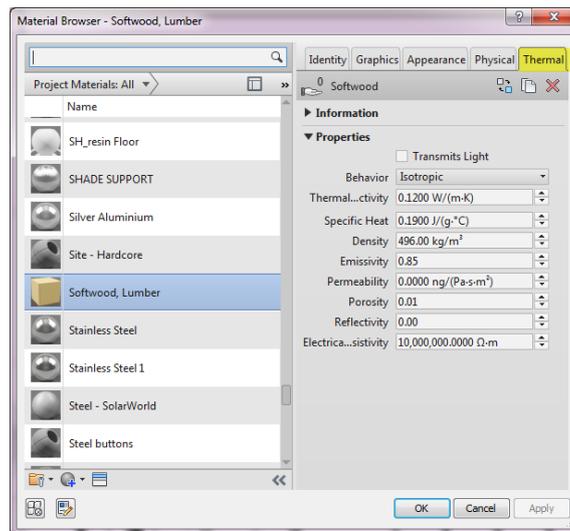


Material **Wood – Furring** doesn't have thermal properties:

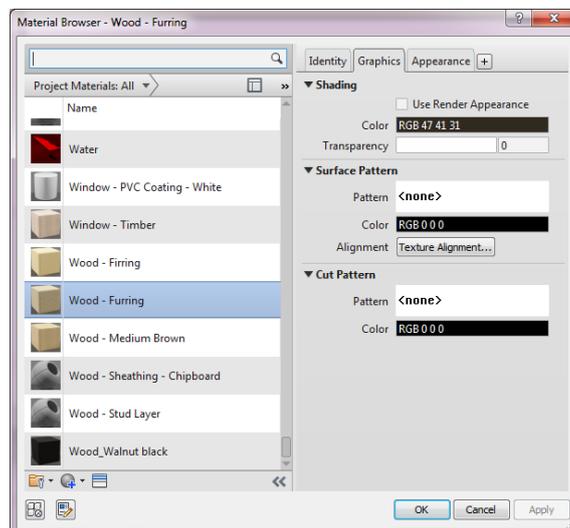

Material **Gypsum Wall Board** does have thermal properties:

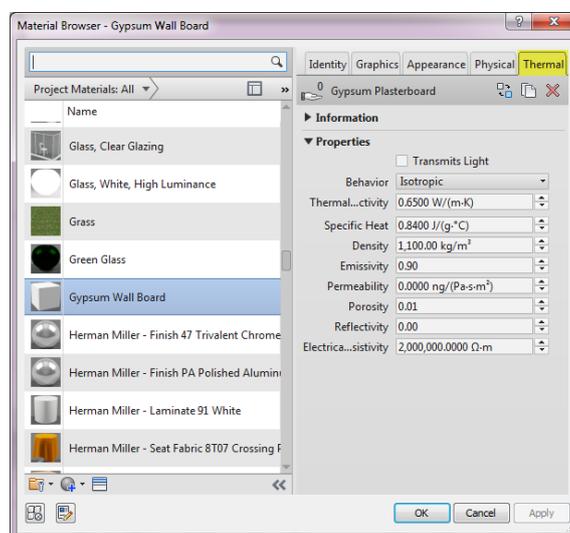


In this case, Revit only provides the material settings for **Softwood, Lumber** and **Gypsum Wall Board**, which have thermal properties included on their settings, so the roof construction transferred to DesignBuilder is missing the other layers:

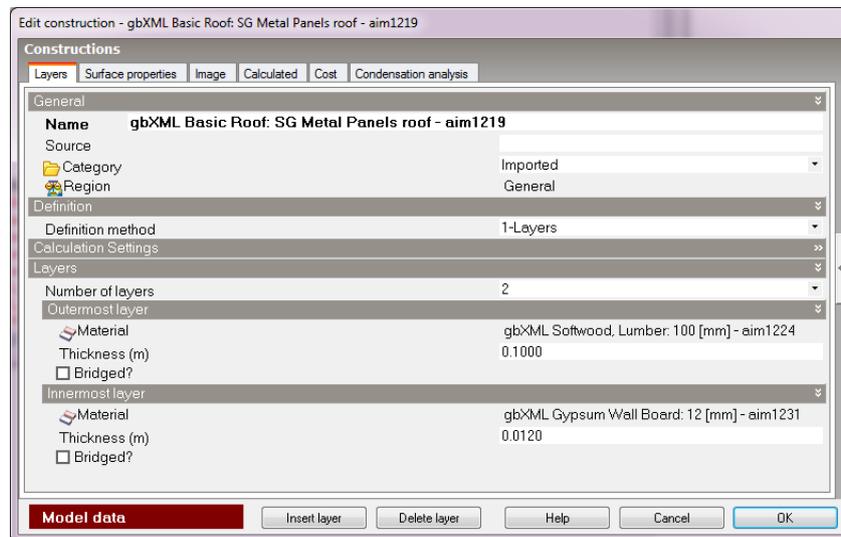

Also, for some surfaces in DesignBuilder, you will notice that construction assignments have not been carried across from Revit at all. For example, navigating to the external floor surface in **101 Kitchen**, you will see that the DesignBuilder default **Project external floor** is still inherited from building level:



To understand the reason for this it is necessary to check the settings in the Revit model. Looking at the thermal properties for the Revit constructions: **Floor: Generic 150mm**, which is assigned to this floor in Revit, you can see that the thermal properties have not been completed in the Revit example model:

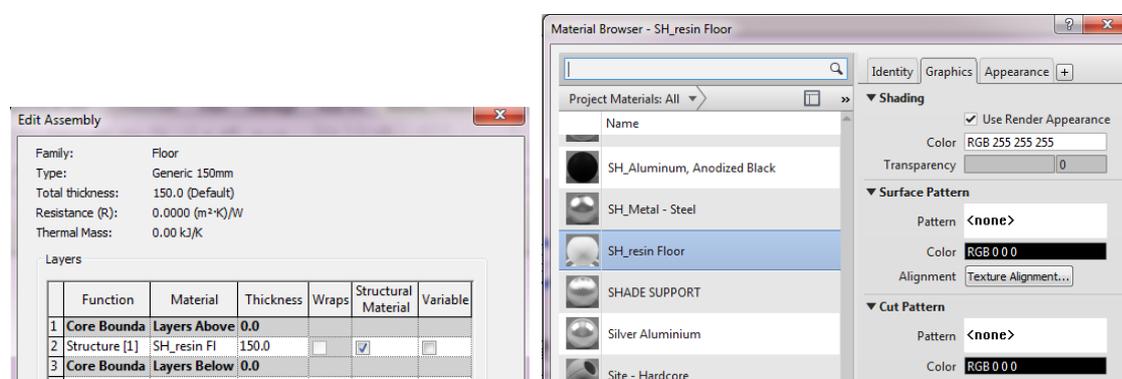

As a final part of the exercise you should re-open the example model in Revit and set up the constructions, materials and enter thermal properties for all constructions and assign them to the appropriate objects before exporting the model again into DesignBuilder.

The process involved is described in the Revit help:

<http://help.autodesk.com/view/RVT/2018/ENU/?guid=GUID-3C378374-D360-4207-A558-3500922A452E>

Example 2 - Revit Add-in (Complex with shading surfaces)

The second example shows a similar process to the first example where the DesignBuilder Revit add-in is used to load the Revit sample model **rac_basic_sample_project.rvt** into DesignBuilder. This example however uses the **Complex with shading surfaces** Export complexity setting to illustrate how to deal with **Open manifold** blocks in DesignBuilder when they occur.

Where steps are the same as for Example 1 the reader is referred back to that Example to avoid repetition.

Steps in Revit

- 1- Open the Revit sample model **rac_basic_sample_project.rvt** from C:\Program Files\Autodesk\Revit 2018\Samples

The same process should be used as described for the Add-in in Example 1 above


- 2- Unselect the **Room Bounding** settings for some components

The same process should be used as described for the Add-in in Example 1 above

- 3- Set the **Limit Offset** and **Base offset**

The same process should be used as described for the Add-in in Example 1 above

- 4- Open the Add-in Settings from Analyze toolbar and select the options **Use room/space volumes** and **Complex with shading surfaces** at the Advanced tab

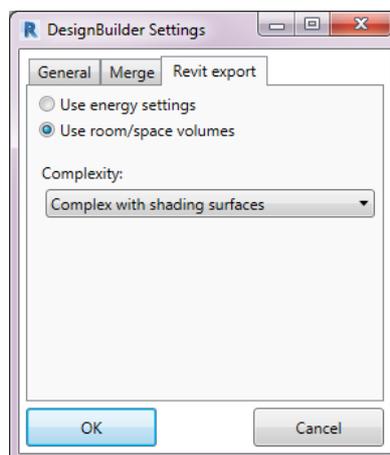

- 5- Click on the DB-Revit add-in icon to open the model in DesignBuilder (Turn off DesignBuilder first if it is opened)

The same process should be used as described for the Add-in in Example 1 above

Steps in DesignBuilder

- 6- Delete the windows that are not required in the DB model in zones **205 Bath** and **202 bedroom**.

The same process should be used as described for the Add-in in Example 1 above

- 7- Adjust the shading surfaces by deleting those not required and creating those that were not imported.


The same process should be used as described for the Add-in in Example 1 above

- 8- Check the construction assignment

The same process should be used as described for the Add-in in Example 1 above

- 9- Flip block surface orientation of the block **206 Master Bedroom**

The [Flip block surface orientation](#) command should be used to fix the orientation of some surfaces in this open manifold block. When the **Flip Block Surface Orientation** command is active you can click on the surfaces in a block to see their orientation. You should aim to see the red arrow pointing outwards away from the centre of the block as shown below for all block surfaces in this Open manifold block:

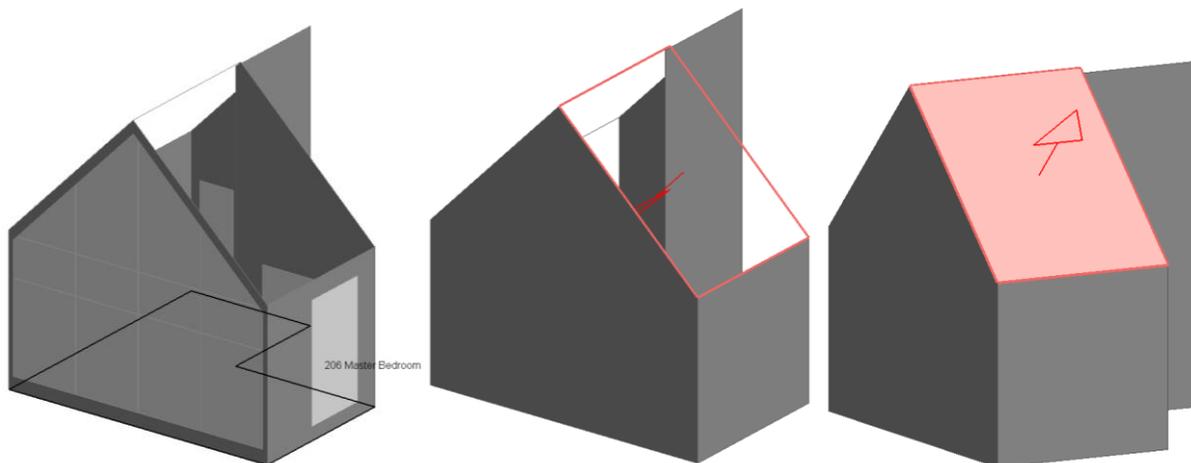

Example 3 - Built-in Revit gbXML export

The third example uses the same **rac_basic_sample_project.rvt** model as Examples 1 and 2, but instead of using the Add-in, a more manual process involving the Revit **Export gbXML** and DesignBuilder **Import gbXML** tools is used. Because the **Simple with shading surfaces** Export complexity option is selected, the end result should be equivalent to the DesignBuilder model generated in the first example.

Where steps are the same as for Example 1 the reader is referred back to that Example to avoid repetition.

Steps in Revit

- 1- Open the Revit sample model **rac_basic_sample_project.rvt** from C:\Program Files\Autodesk\Revit 2018\Samples

The same process should be used as described for the Add-in in Example 1 above


- 2- Unselect the **Room Bounding** settings for some components


The same process should be used as described for the Add-in in Example 1 above

- 3- Set the **Limit Offset** and **Base offset**

The same process should be used as described for the Add-in in Example 1 above


- 4- Export the gbXML file from the Menu **File -> Export -> gbXML**. Choose the **Use Room/Space Volumes** method on the **Export gbXML** dialog

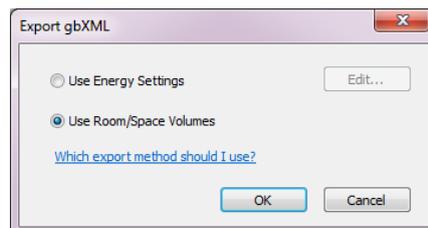

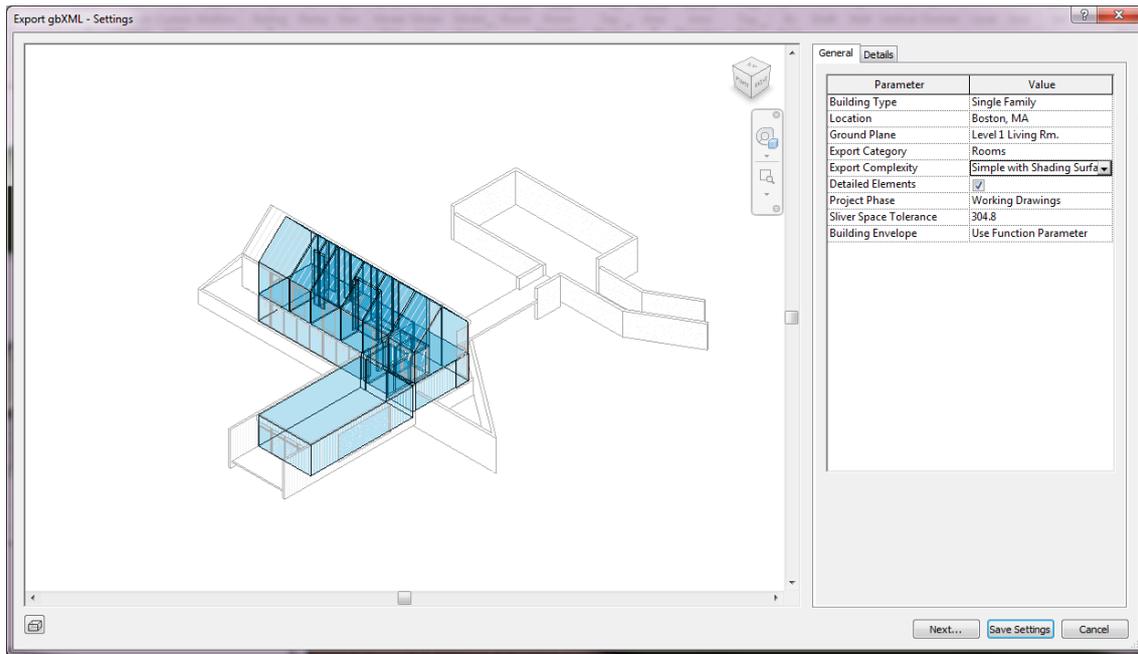

Steps in DesignBuilder

5- Import the gbXML file

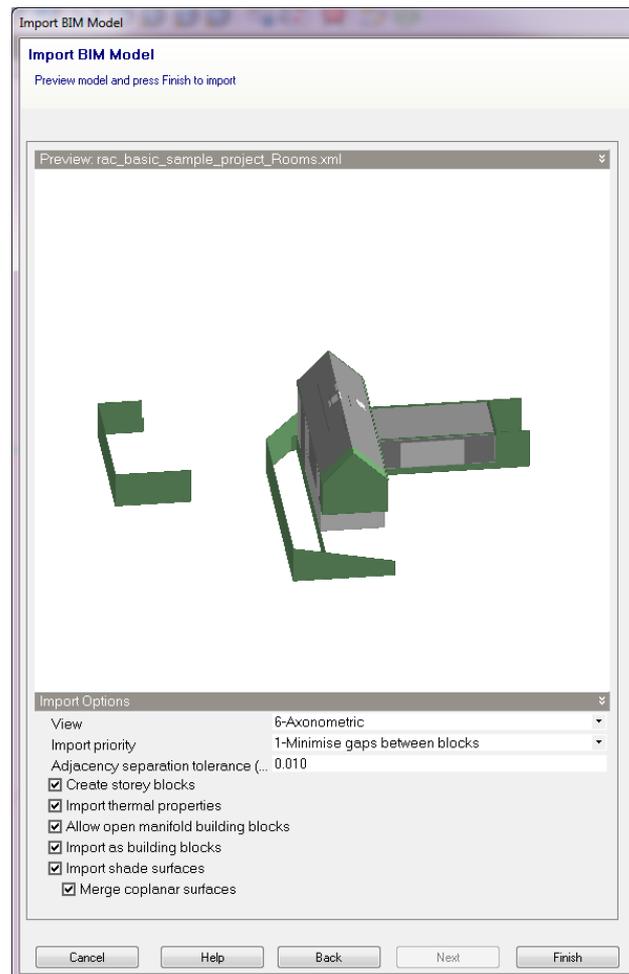

6- Delete the windows that are not required in the DB model in zones **205 Bath** and **202 bedroom**.

The same process should be used as described for the Add-in in Example 1 above

- 7- Adjust the shading surfaces by deleting those not required and creating those that were not imported.

The same process should be used as described for the Add-in in Example 1 above

- 8- Check the construction assignment

The same process should be used as described for the Add-in in Example 1 above

7. Advice

This tutorial explains methods that can be used to transition a model from Revit to DesignBuilder and the impact of applying the main options. Some key high-level learning points are:

- a. The decision as to whether to use the DesignBuilder Revit Add-in is a matter of personal preference, however **the Add-in simplifies and automates the process, so in general it is best to use it.**
- b. When using the AM method, before even attempting the transfer, it is essential to set the Revit model up correctly by following steps described in the [Preparing the Analytical Model by Adding Rooms](#) section.
- c. The EAM is much quicker to use than the AM as it does not require the rooms to be set up, so it may be worth trying that first. However in most cases the manual intervention allowed by the AM approach gives a much more accurate transition. For the Revit sample model used in this tutorial, the AM provided the best results provided the preparatory steps described in Example 1 are followed.
- d. The **Priority** setting (on the **DesignBuilder Settings** dialog when using the Add-in or on the DesignBuilder **Import BIM Model** dialog when using the Export/Import method) is an important choice that will normally affect the quality of the data transfer. The **Minimise gaps between blocks** option typically gives the best results for the majority Revit models so you should try that first.
- e. It is important to carefully check the DesignBuilder model generated before using it for further analysis. Checks include making sure that any open manifold blocks have their surfaces correctly orientated, ensuring that all windows and doors have been transferred and that any thermal properties defined in Revit have been retained.
- f. Note that regardless of the transition method used, DesignBuilder only imports the **geometry** and **the thermal properties** of the materials through its gbXML import capability. Any settings made in Revit to define occupancy, lighting and HVAC are not transferred to DesignBuilder.